

BRISTAN

Installation Instructions & User Guide

Please leave these instructions
with the end user



Product Code: PM BAS2 C (D5)

Specifications

Dynamic Water Pressure

Min: 0.5 bar


Max: 5.0 bar

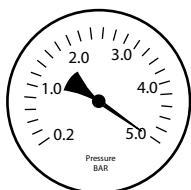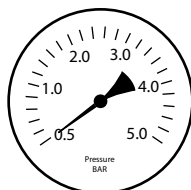

Maximum Static Pressure: 10.0 bar


Inlet Water Temperature

Cold Water Supply

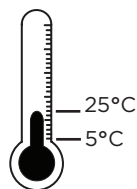


Min: 5°C Max: 25°C

Hot Water Supply

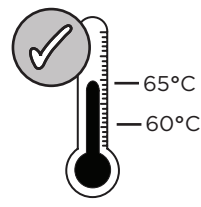

60-65°C
recommended

 Inlet Connections



15mm Copper
Pipes

Tools You'll Need



Crosshead Screwdriver

Adjustable Spanner

Prior to Installation

All products manufactured and supplied by Bristan are safe provided they are installed, used correctly and receive regular maintenance in accordance with these instructions.

This product has been designed to comply with the Water Supply (Water Fittings) Regulations 1999 and current bylaws. For full Installation Requirements & Notes (IRN) please visit wras.co.uk/directory.

We recommend isolation valves to be fitted to the inlet water supplies to ensure ease of future maintenance.


Before installing these taps the water supply must be thoroughly flushed in order to remove any swarf, solder etc.

This product must not be modified in any way as this will invalidate the guarantee.

If in doubt, contact a registered plumber or your Local Water Authority or the Secretary of the Institute of Plumbing, address as follows:-

The Institute of Plumbing,
64 Station Lane,
Hornchurch,
Essex,
RM12 6NB, Tel: 01708 472791

Pack Contents

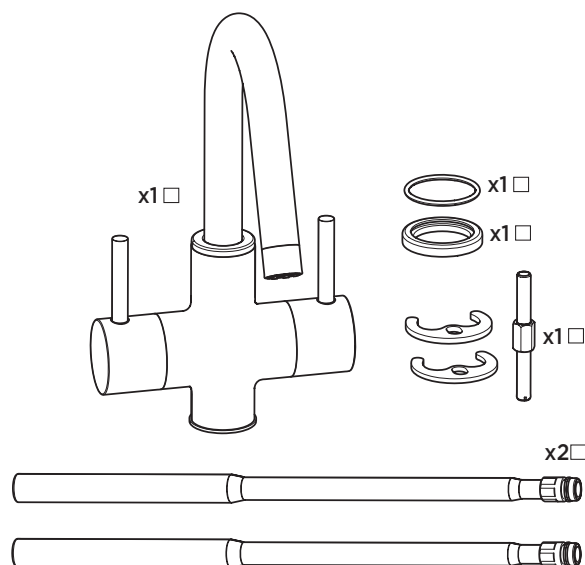


Spare Parts

To replace any spare parts
for your tap, why not
scan the QR Code or
visit www.bristan.com
and search for your product.




Installation

1

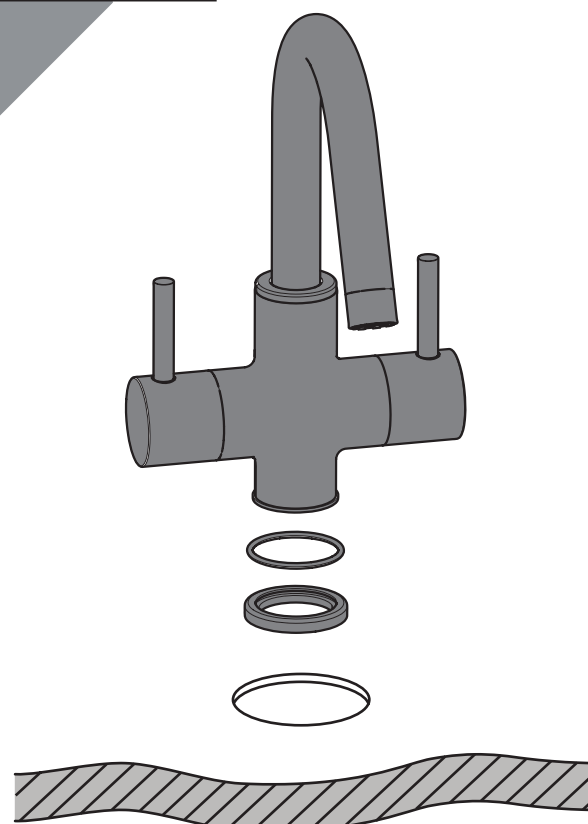

Fit the tap to the sink, including the
rubber washer.


2

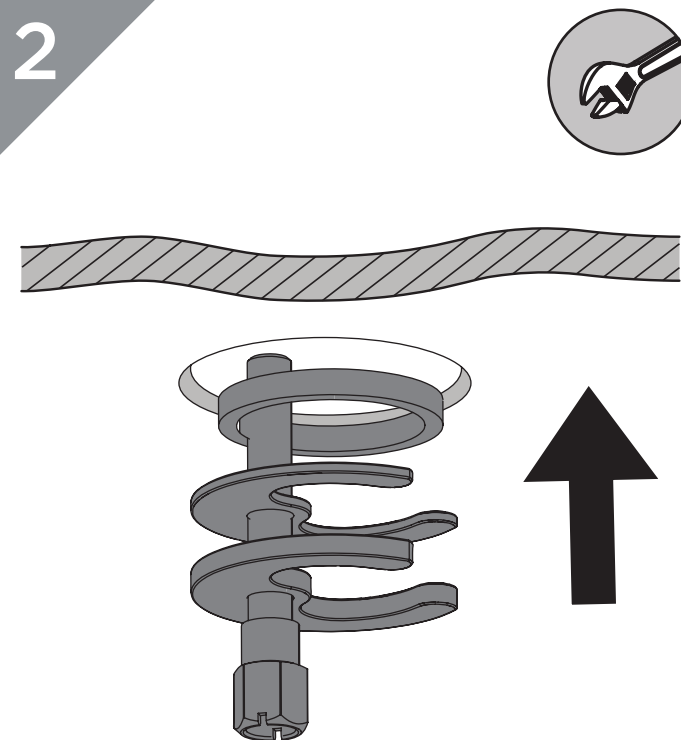

Secure the tap to the sink using the
fixing kit.


3

Fit the inlet connection tails
to the base by hand only.
(DO NOT OVERTIGHTEN)

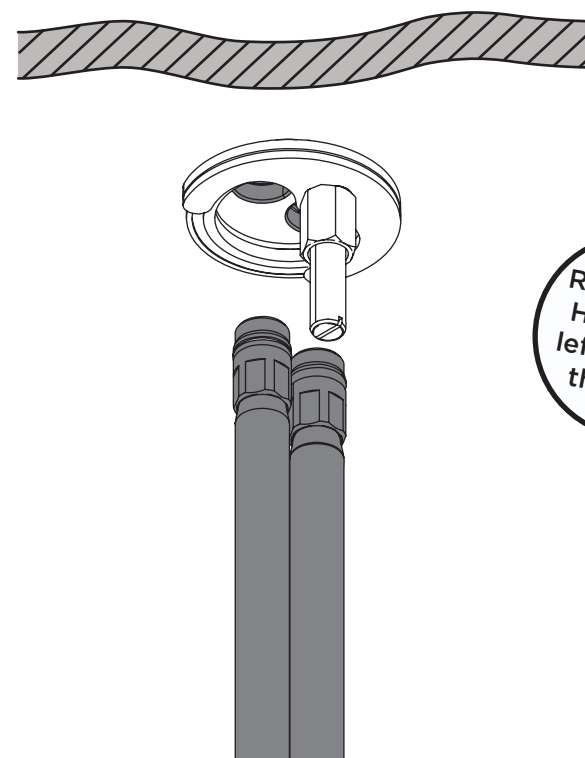

REMEMBER
Hot on the
left, cold on
the right!


4

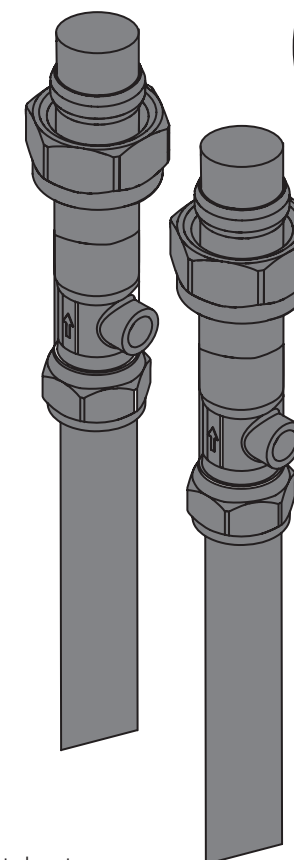

Connect hot and cold water
supplies.

IMPORTANT
Turn on water
supply for a few
minutes and check
all joints and
connections for
any leaks.

Operation

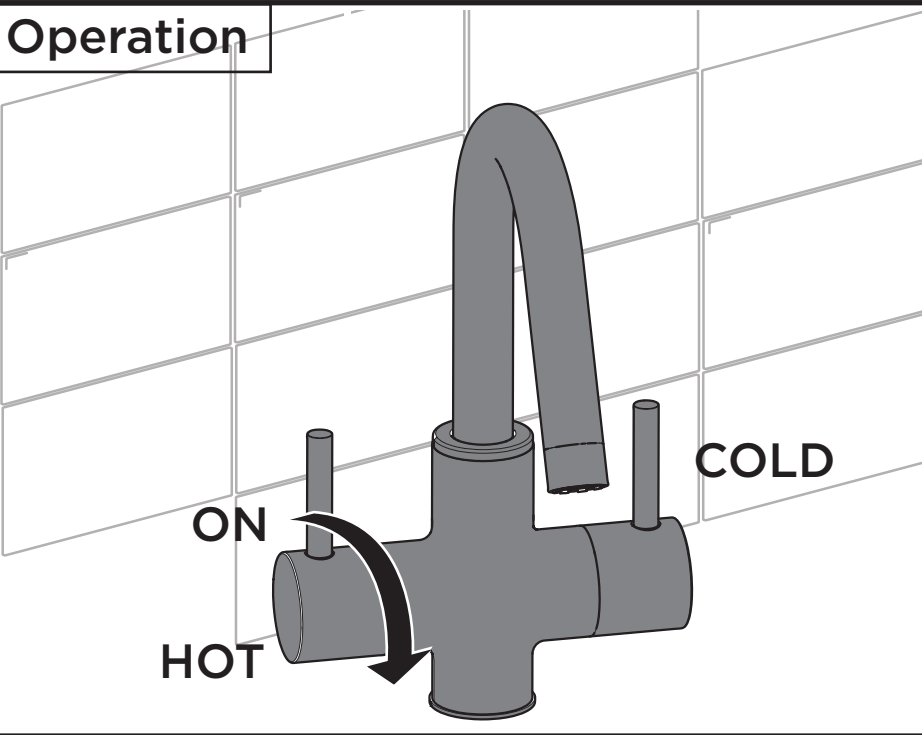

General Cleaning

Bristan products are made from premium materials, with hand polishing and electroplated finishes.

Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on spouts.

Maintenance - Cleaning/Replacing Outlet

1

IMPORTANT
Isolate the water supply before starting!

Unscrew the anti-splash.

2

Remove the anti-splash from housing. Clean and replace as necessary.

3

Secure the anti-splash. Turn on the mains water supply, letting the water flow for a few minutes to flush through the system.

Troubleshooting

Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Increase water flow rate or pressure through system.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

Notes

Maintenance - Cleaning/Replacing Valves

1

Remove handles.

IMPORTANT
Isolate the water supply before starting!

2

Remove the valves using a suitable spanner.

3

Place valves in a suitable solution and soak until fully de-scaled.

4

Replace the valves.

5

Replace the handles.

6

Turn on the mains water supply, letting the water flow for a few minutes to flush through the system.

Love Your Chrome

Bristan offers an effective chrome-friendly cleaning kit for use with your taps and showers. Scan the QR Code or search for 'CLEAN KIT01' on www.bristan.com.



At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register to register your product via a computer.

For full guarantee terms and conditions visit www.bristan.com/guarantees.



We Know & We Care