

2 IN 1 FAN PURIFIER



MSmartHome

Download the app
& activate product

USER MANUAL

AMS150-PBW

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	05
PRODUCT OVERVIEW	06
PRODUCT INSTALLATION	07
OPERATION INSTRUCTIONS	09
APP SETUP AND OPERATION	11
CLEANING AND MAINTENANCE	13
TROUBLESHOOTING	15
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	16
DISPOSAL AND RECYCLING INFO	17
DATA PROTECTION NOTICE	18

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols



Danger

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



Warning of electrical voltage

This symbol indicates that there is a danger to life and health of persons due to voltage.



Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



Attention

The signal word indicates important information (e.g. damage to property), but not danger.



Observe instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

⚠ Caution

- Read rules for safe operation and instructions carefully.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and usermaintenance shall not be made by children without supervision.
- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- Keep electrical appliances out of reach from children or infirm persons. Do not let them use the appliances without supervision.
- Household use only.

⚠ Warning

- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- The appliance is only to be used with the power supply unit provided with the appliance.

- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
- Prior cleaning unplug the fan.
- The rotor guard shall not be disassembled/opened to clean the rotor blades.
- Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

SPECIFICATIONS

 
Product Model	AMS150-PBW
Working Voltage	24V $\overline{\text{---}}$
Rated Power	33 W
Noise	\leq 61dB

Parts	Adapter
Input	100-240V- 50/60Hz 1.5A
Output	24V $\overline{\text{---}}$ 1.5A

Item	Symbol	Value	Unit
Maximum fan flow rate	F	27,07	m ³ /min
Fan power input	P	22,10	W
Service value	S _v	1,22	(m ³ /min)W
Standby power consumption	P _{SB}	0,22	W
Fan sound power level	L _{WA}	57,32	dB(A)
Maximum air velocity	C	2,66	meters/sec
Seasonal electricity consumption	Q	7,32	kWh/a
Measurement standard for service value	EN IEC 60879:2019		

PRODUCT OVERVIEW

Component Name

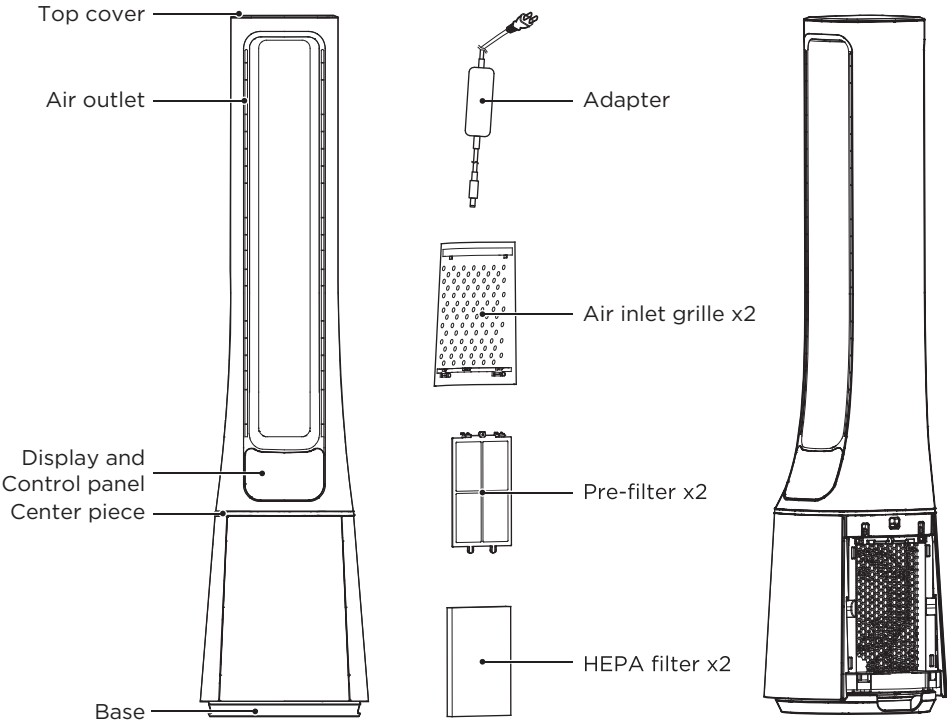


Parts List



Remote control x1



 Manual x1



Adapter x1

 
NOTE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.


PRODUCT INSTALLATION

Installation Procedures


1 Remove the air inlet grille.

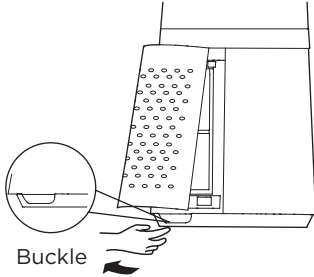

 
2 Take out the pre-filter: press the raised part on both sides to pull it outwards, and take out the pre-filter.

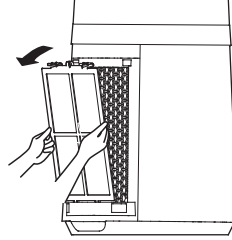

 
3 Remove the protective film of the filter.

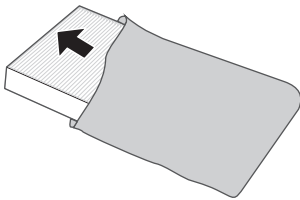

 
4 Install the HEPA filter. It is recommended to clean the filter every two weeks and replace the filter every six months (The cleaning and replacement cycle can be adjusted according to the use environment).

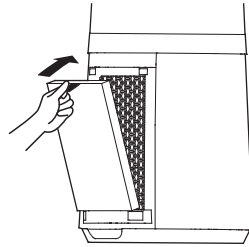

 
5 Install the pre-filter: align the slot position at the bottom, and buckle up the upper U-shaped buckle.

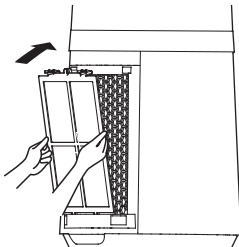

 
6 Install the air inlet grille: align the upper two buckles and press them tightly, then press the two sides at lower part, slowly and gently buckle the air inlet grille.

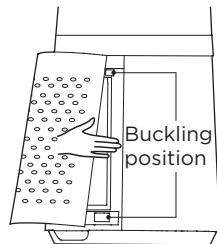

 7 Install the adapter, Tighten the plug with the socket position of the base.

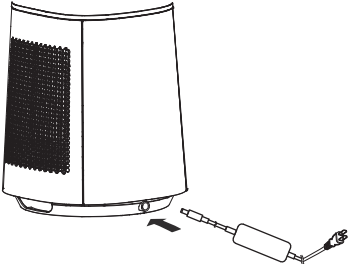


8 Plug power supply.

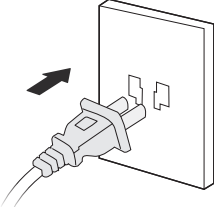 

OPERATION INSTRUCTIONS

 
Control Panel Operations

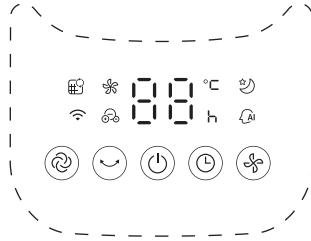

	Function description
	<ul style="list-style-type: none"> Startup/Standby, long press the on button, “” indicator lights up.
	<ul style="list-style-type: none"> Touch this button to switch the wind mode among normal, plasmacluster, sleep and AI smart.(When the filter replacement reminder light is on, press and hold this button to turn off the reminder light)
	<ul style="list-style-type: none"> Touch this button to start/stop the swing.
	<ul style="list-style-type: none"> Touch this button to switch the wind speed (cycles among level 1-2-3-•••-10-1-2).
	<ul style="list-style-type: none"> Schedule to shut down in the power-on state, and schedule to start up in the standby state. Touch this button to set the timer (the display cycles among 0-1-2-•••-12-0h); 0h means that the timer is canceled.
	<ul style="list-style-type: none"> Filter replacement reminder icon; when the icon “” stays on, the filter needs to be replaced.
	<ul style="list-style-type: none"> In AI smart wind mode, the indicator light “” is on, and the wind power is automatically adjusted according to changes in ambient temperature.
	<ul style="list-style-type: none"> This indicator light is on in sleep wind mode.Start the sleep wind function, and the fan automatically adjusts the level according to the program; there are three levels: 1, 2 and 3; you can adjust the level of the sleep wind by pressing the wind speed button.
	<ul style="list-style-type: none"> Displays the wind speed level or set timer, and displays the temperature in the wind mode.
	<ul style="list-style-type: none"> This indicator light is on in ion wind mode. In this mode, plasmacluster is turned on, and level 1-10 wind has plasmacluster.
	<ul style="list-style-type: none"> This indicator light is “”.Long press the switch button for 3 seconds to start matching or disconnect “”. The lights are on, “” is connected. The lights are blinking and the “” is disconnected or being connected.

Remote Control

 - The remote control should be normally used within 5 meters of the front of the product and 30 degrees of the deviation angle.
- The battery contains many heavy metals, acids and bases, etc., which may threaten human's health. Waste batteries should be recycled separately.

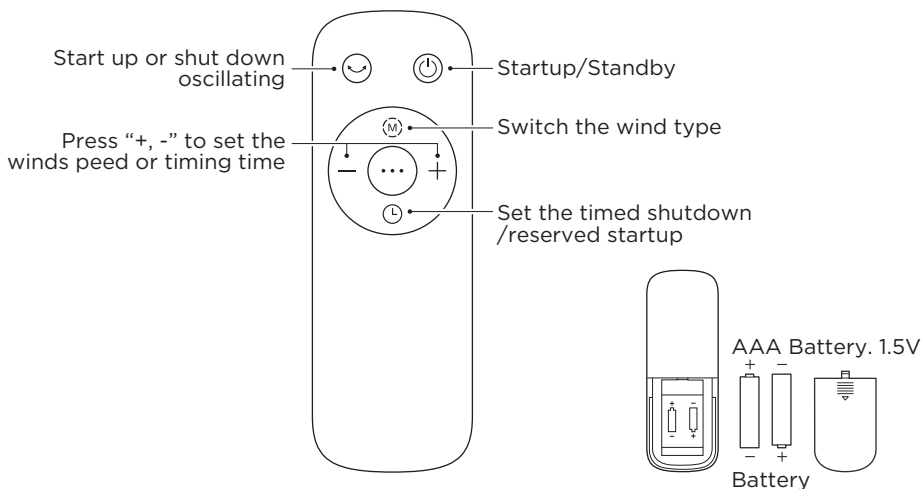

NOTE

Use manganese or alkaline batteries of type "AAA". DO NOT use rechargeable batteries.

Additional Functions

• Forced shutdown

There is no operation during the running of the fan, after 15 hours of continuous operation, the fan will be forced to shut down auto-matically.

• Intelligent memory

When the fan is turned off or powered off, it will run in the state before turning off or power off when the power is powered on again (the timing function is not memorized).

• Screen-off function

In case of no operation for 30 seconds during normal operation, the indicator light on the body will be automatically off, but the fan will continue to operate. Press the ON/OFF button to turn off the fan when the screen is off, and press the other button to restore display.

APP SETUP AND OPERATION

Download the MSmartHome app

On an app market (Google Play Store, Apple App Store), search for "MSmartHome" and find the MSmartHome app. Download and install it on your phone. You can also download the app by scanning the QR code below.



Register and log in

Open the MSmartHome app, and create a new account to start (you can also register through a third-party account). If you already have an existing account, use the account to log in.



Connect your devices to MSmartHome

- 1 Please make sure your mobile phone is connected to a wireless network. If it is not, go to Settings and enable wireless networks and Bluetooth.
- 2 Please power on your devices.
- 3 Open MSmartHome app on your phone.
- 4 If a message of "Smart devices discovered nearby" appears, click to add.
- 5 If no message appears, select "+" on the page and select your device in the list of nearby devices available. If your device is not listed, please add your device manually by the device category and device model.
- 6 Connect your device to the wireless network according to instructions on app. If the connection fails, please follow the instructions provided by the app to continue with the operation.



 NOTE

- Make sure your devices are powered on.
- Keep your mobile phone close enough to your device when you are connecting your device to the network.
- Connect your mobile phone to the wireless network at home, and make sure you know the password of the wireless network.
- Check if your wireless router supports 2.4 GHz band and turn it on. If you are not sure whether the router supports 2.4 GHz band, please contact the router manufacturer.
- The device cannot connect to the wireless network that requires authentication, and it usually appears in public areas such as hotels, restaurants, etc. Please connect to a wireless network that does not require authentication.
- Turn off the WLAN+ (Android) or WLAN Assistant (iOS) function of your mobile phone when connecting your device to the network.
- In the case that your device connected to a wireless network before but it needs to reconnect, please click "+" on the app Home page, and add your device again by the device category and model according to the instructions on app.

Operation frequency band: 2.4GHz; RF outputpower:13-20dBm;

Hereby, GD Midea Environment Appliances MFG. Co., Ltd declares that this electric fan is in compliance with the essential requirements and other relevant provisions of RE Directive 2014/53/EU.

 
CLEANING AND MAINTENANCE

The fan requires minimal maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.


1. Before cleaning and assembling, unplug the fan power.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
Please wipe the exterior parts with a soft cloth soaking a mild detergent.
3. Do not use any abrasive detergent or solvents to avoid scratching the surface.
4. Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid entering into the motor housing or interior parts.
6. Be sure to unplug from the electrical supply source before cleaning.
7. Plastic parts should be cleaned with a soft cloth moisten with mild soap Thoroughly remove soapsuds with dry cloth.

Pre-filter Cleaning


1 Unplug the power cord.

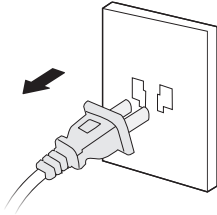


2 Take out the filter.

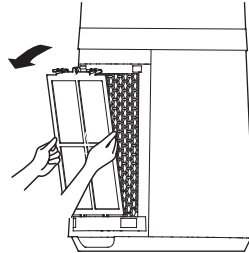 

3 Remove the dust with vacuum cleaner.

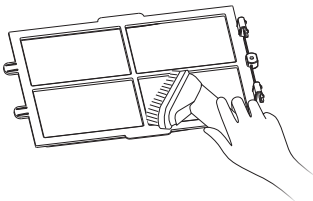 

 4 Install the machine in reverse order and plug power supply.

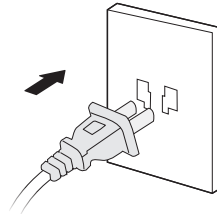

Filter Replacement

 
- 1** Filter model: FQ150CJ-2
(including 2 pieces).



- 2** When the indicator light for replacement of filter is on, the prompt that reminds you of filter replacement will appear. If it is not replaced in time, the prompt will appear during each startup.



- 3** Replace a new filter.

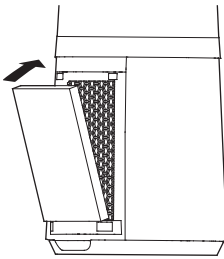

- 4** Long press the mode button for 3 seconds to turn off the indicator light for filter replacement.




TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
The machine does not work properly after installed	• The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	• The switch on the body is not turned on.	Turn on the switch on the body.
The remote does not work	• The battery needs replacing.	Replace the battery.
	• The remote is being used more than 5m away from the fan.	Use the remote closer to the fan and make sure it is pointing directly at the display panel.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions there of are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important Instructions for Environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.



Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



make yourself at home



www.midea.com

© Midea 2022 all rights reserved