
# Hi there,

Meet your new Lloyd Pascal

**Under Basin** 

Unit

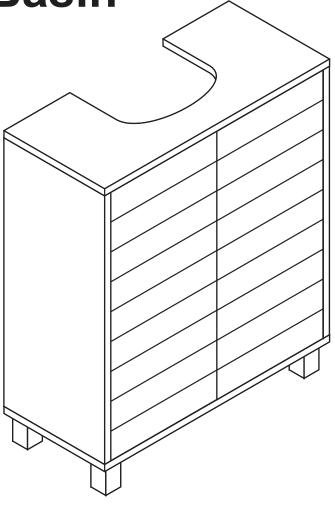



## **Customer Helpline**

If you need help or have damaged or missing parts, call our customer helpline 0121 776 5720 or visit our website at www.lloydpascal.com

Assembly instructions- Please keep for future reference

056.50.341M 056.94.341M

# lloyd Est. 1919 pascal we love home

# Welcome to the Lloyd Pascal family established in 1919

We would love to see your new product in its new home. **Share your experience** by taking a photo or video of your new LP product and **post it on social media** tagging #welovehome #Lloydpascal #LPfurniture #LPhome

Connect with us: Using your mobile camera, scan the QR bar code below of your favourite social media channel and follow us!





















## Are you loving/satisfied with your new purchase?

**Yes:** That's perfect. **It would make our day** if you could leave us a **review on our social media channels**. Your feedback will help us develop even better products to love.

**No:** If for any reason your enjoyment of our product is on hold then **let the** retailer that you purchased your item from know or contact us and we will resolve your issue as quickly as possible.



# Safety and Care Advice

### IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.
- Assemble the item as close to its final position (in the same room) a possible.
- Assemble on a soft level surface to avoid damaging the unit or your floo.



 We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use

hand screwdrivers.

- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste.
   Take to your local authority waste disposal centre.

### **Additional Guidance**

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

#### WARNING

## IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent this item of furniture tipping over:

- Use the wall attachment device provided.
- Do not let children climb or hang on drawers, doors or shelves.
- Place the heaviest items in the lower drawers or shelves.
- Do not place TV's or other heavy objects on top of this product, unless it has been specifically designed to support them.
- Never open more than one drawer at a time.

An attachment device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson.


Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.




## **Fittings**

### Please check that you have all the fit ings listed below:


NOTE: The quantities below are the correct amount to complete the assembly. In some cases more fittings may need to supplied than required.

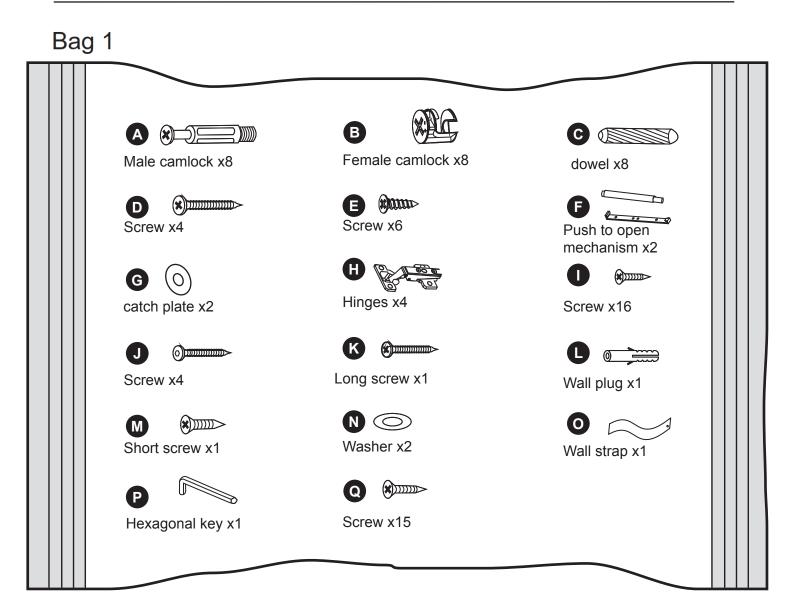


## Tools required

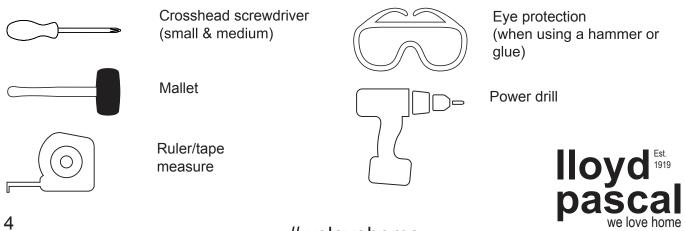

## **Panels**

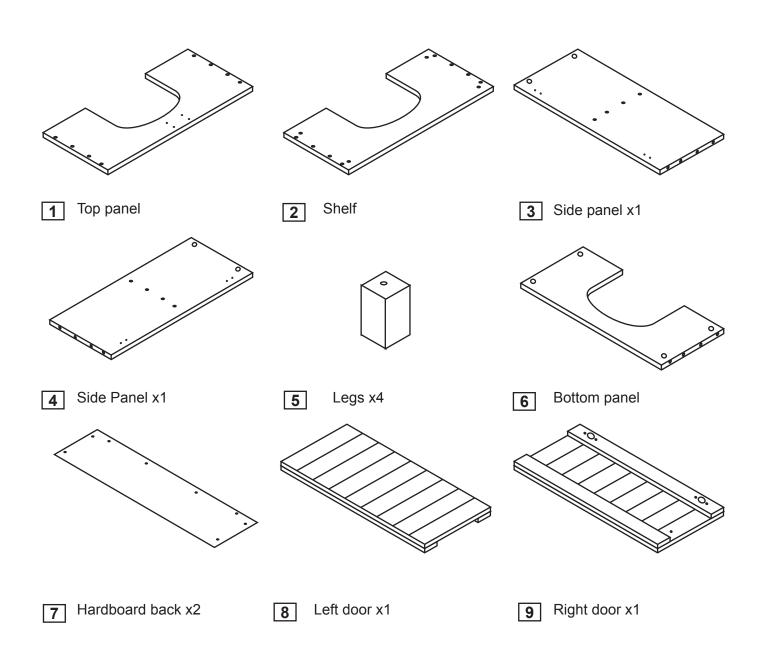





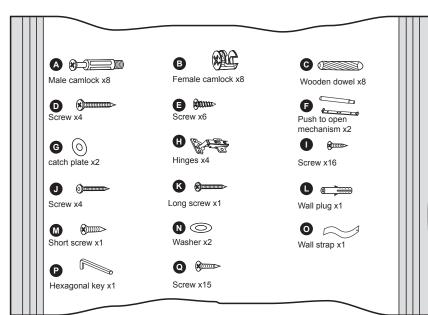

· · · · · · Push to open mechanism x2

Screw x2

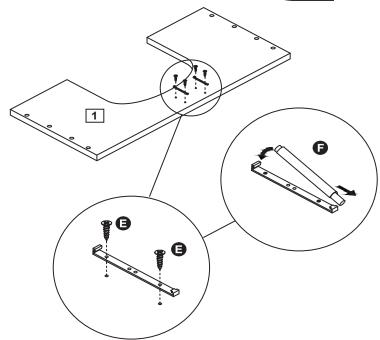

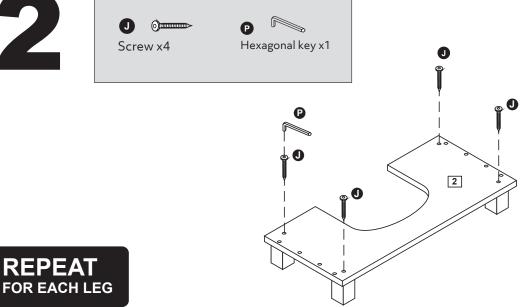


lloyd 1919 pascal we love home

#welovehome

3




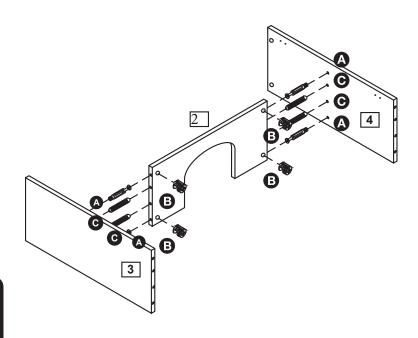

WARNING: Please refer to page 10 for details on fitting camlocks.

4




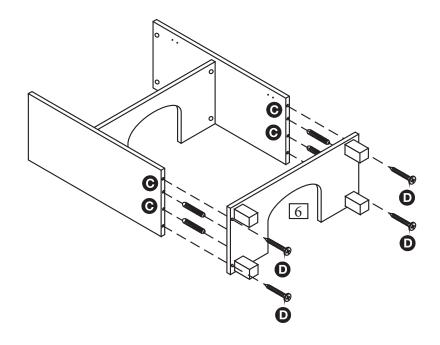







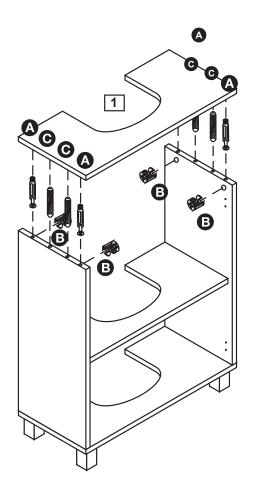


WARNING: Please refer to page 10 for details on fitting camlocks.







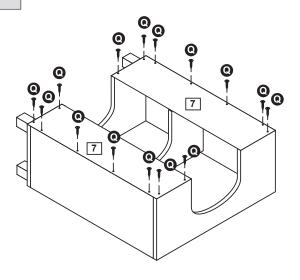


#welovehome



7



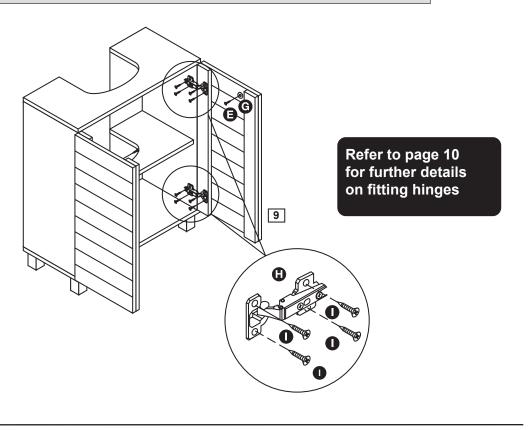

0

REPEAT FOR DOOR 8








Long screw x1





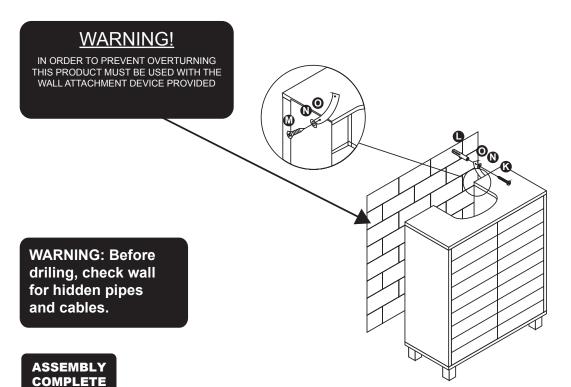




## **Using camlocks**


#### Step 1

 Connect the male camlock as directed in the assembly instructions using a screwdriver.



## Step 3

 
Push the male camlock into every hole.



#### Step 2

Insert the female camlock as shown in the instructions.

 Note: Ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.




## Step 4

Turn the female camlock with a screwdriver.

You should feel a click when the camlock is locked in place.

 The joint is now secure.





For how to use camlocks watch our video

https:// vimeo.com/ 340876871

## Adjusting hinges


## Hinge adjustment

- a: To move the top panel up or down, loosen screws shown and move top panel to suit.
- b: To move the top panel in or out, loosen screws shown and move top panel to suit.


Retighten screws

c: To move the top panel left or right, adjust screws shown.


a:

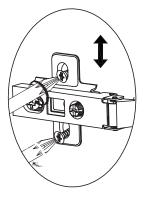

b:

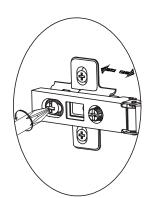

C:

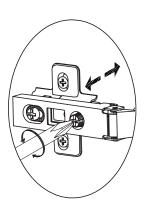



## A Guide to Wall Mounting & Fixings

#### Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, eg:



these are suitable for use in masonry walls

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure



 
#### Hints:

- 1. General rule: always use a larger screw and wall plug if you are not sure.
- Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3. Ensure you drill the hole horizontally; do not force the drill or enlarge the
- 4. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5. Ensure wall plugs are well fitted and are a tight fit in the drilled hol

## Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No. 1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No. 2 "Plasterboard" wall plug




For use when attaching light loads onto plasterboard partitions.

 No. 3 "Cavity Fixing" wall plug




For use with plasterboard partitions or hollow wooden doors.

 No. 4 "Cavity Fixing - Heavy Duty" wall plug




For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No. 5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No. 6 "Shield Anchor" wall plug - heavy loads



For use with heavier loads such as TV and HiFi speakers and satelite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.