





# 6mm SLIDING DOOR GUIDE

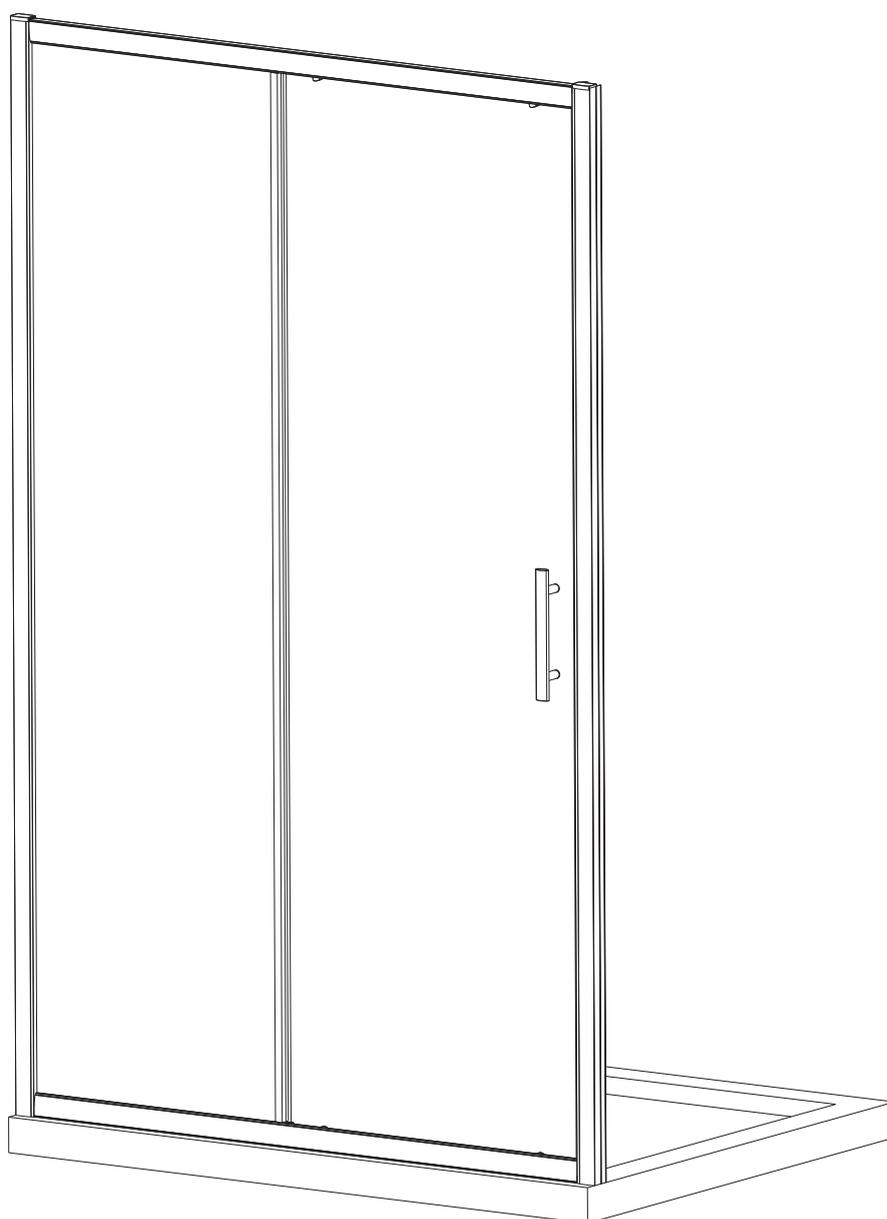

## General Information


Please inspect this product upon delivery. Any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. **TAKE CARE WHEN HANDLING GLASS PARTS-AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE.** Glass breakage claims will not be accepted after the product has been unpacked.

### TOOLS REQUIRED

DESCRIPTION	PART IMAGE	DESCRIPTION	PART IMAGE
Tape measure		Drill	
Spirit level		Flat-head Screwdriver	
Pencil		Cross head Screwdriver	 PZ1
Ø6mm Drill bit		Mallet	
Ø3mm Drill bit		Silicone Sealant	
Ø4mm Hexagon Wrench			

 **This product is heavy and may require two people to install.**

# ASSEMBLY INSTRUCTIONS - DRAWING



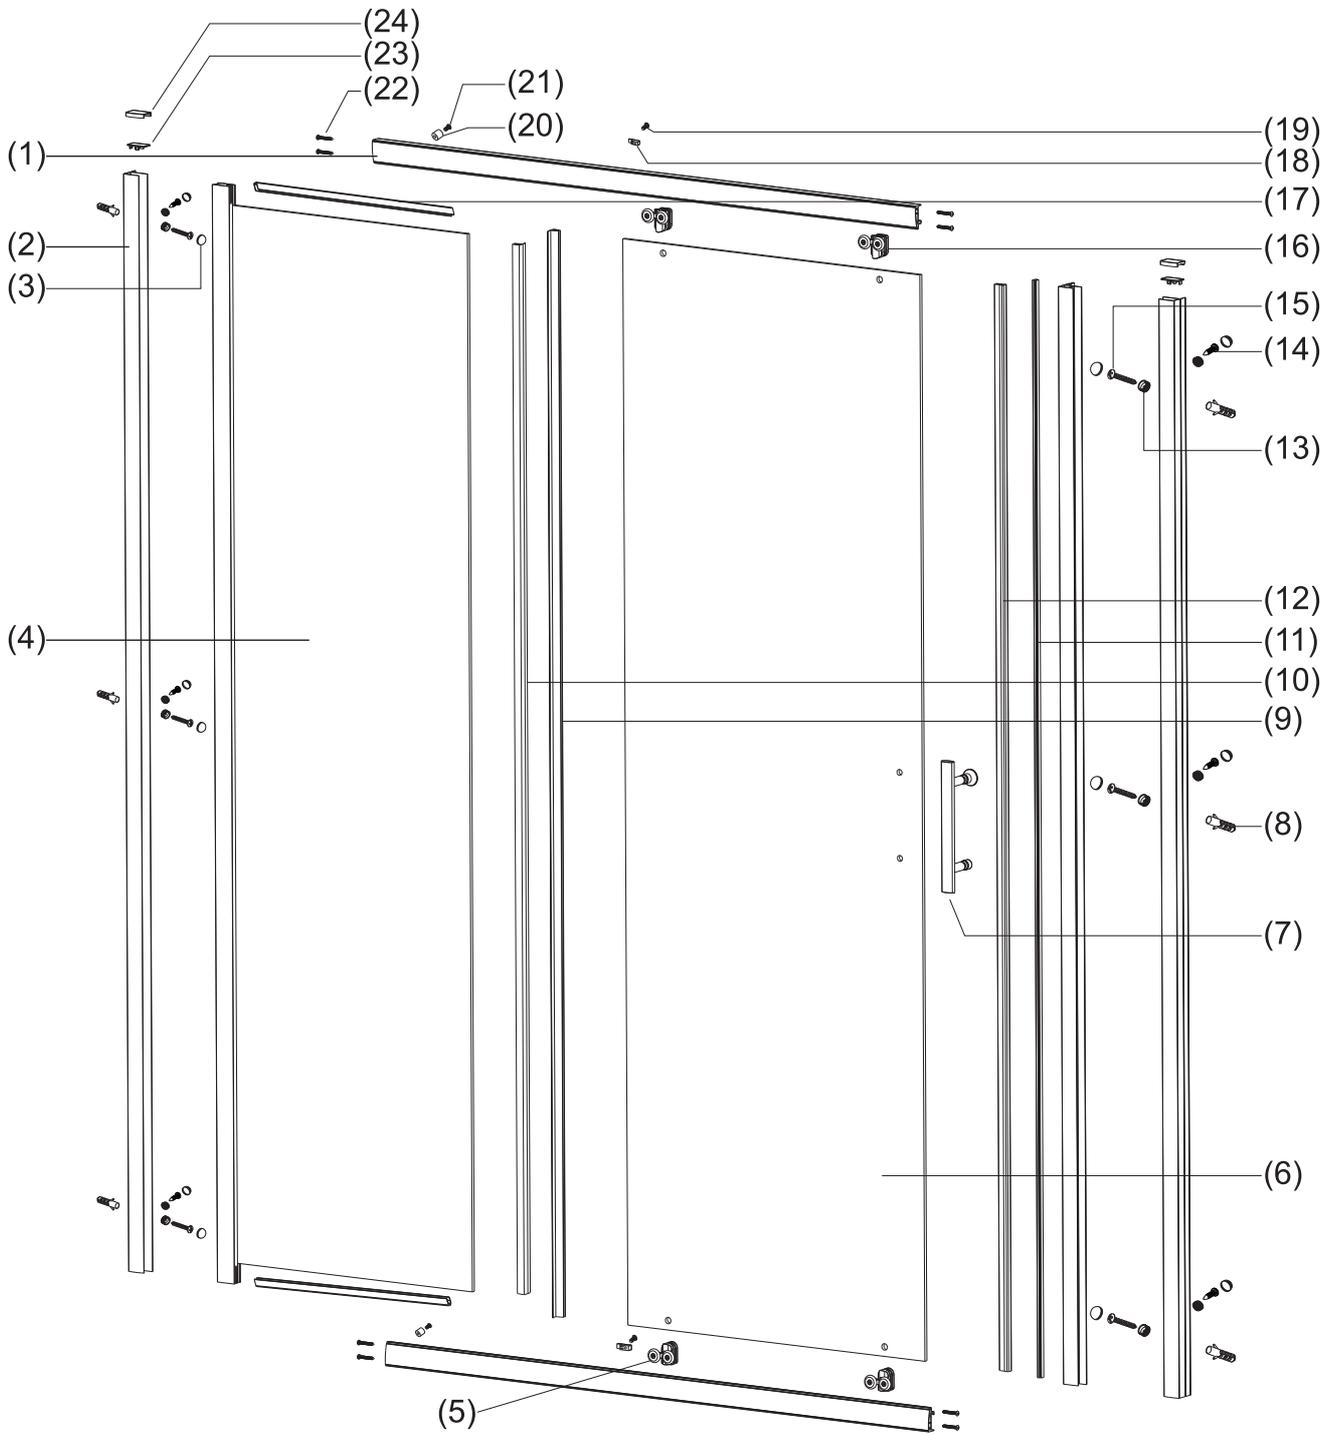


- |  |  |
|--|--|
| (1) 2x Top And Bottom Rails                | (13) 12xScrew Cover Clips              |
| (2) 2x Wall Profiles                       | (14) 6x Screws ST4x16                  |
| (3) 12x Screw Cover Caps                   | (15) 6x Screws ST4x30                  |
| (4) 1x Flat Fixed Panel                    | (16) 2x Top Rollers                    |
| (5) 2x Bottom Rollers                      | (17) 2x Bottom/Top Seals               |
| (6) 1x Moving Panel                        | (18) 2x Glass Clips                    |
| (7) 1x Handle                              | (19) 2x Screws ST4x13                  |
| (8) 6x Ø6x30 Wall plugs                    | (20) 2x Bumper Blocks                  |
| (9) 1x Upright Water Seal For Moving Panel | (21) 2x Screws ST4x8                   |
| (10) 1x Upright Water Seal For Fixed Panel | (22) 8x Screws ST3.5x30                |
| (11) 1x Magnet Seal A                      | (23) 2xCover Caps For Upright Profile  |
| (12) 1xMagnet Seal B                       | (24) 2xCover Caps For wall Profile L/R |







## Before Installation

Please ensure that the shower tray is level and checked with a spirit level. The tray should be installed first. Tiles should then be tiled down to the tray. The enclosure can then be installed.



Step 1

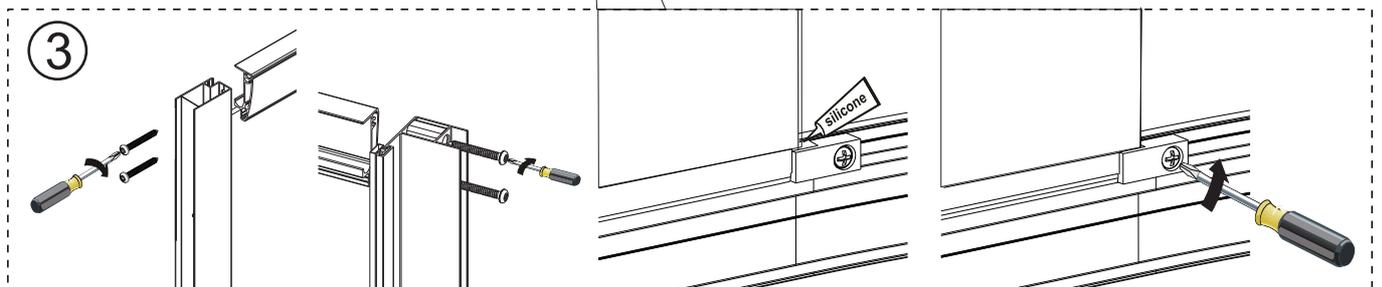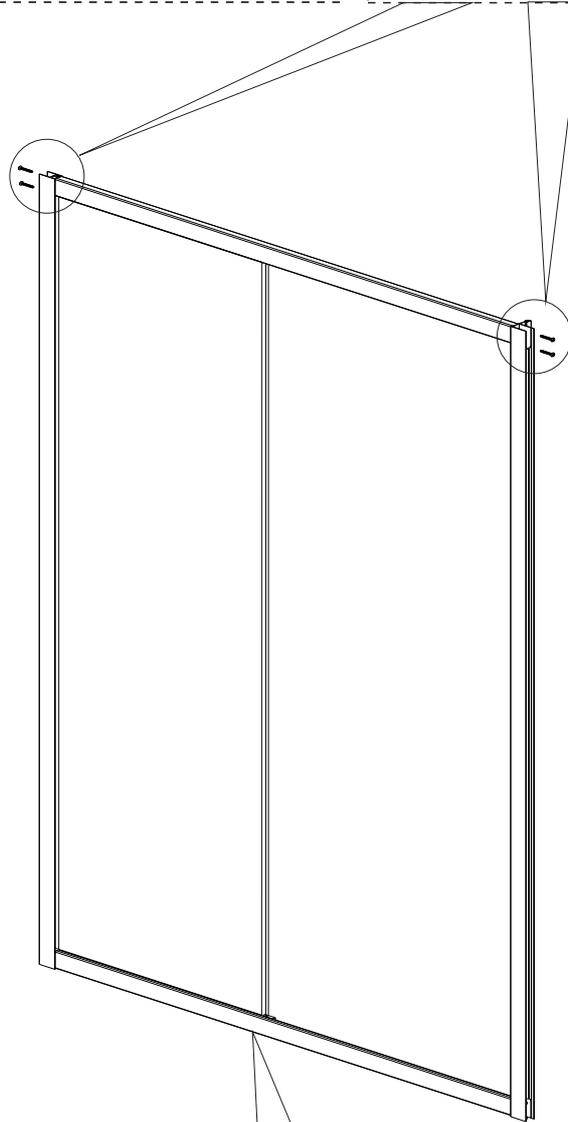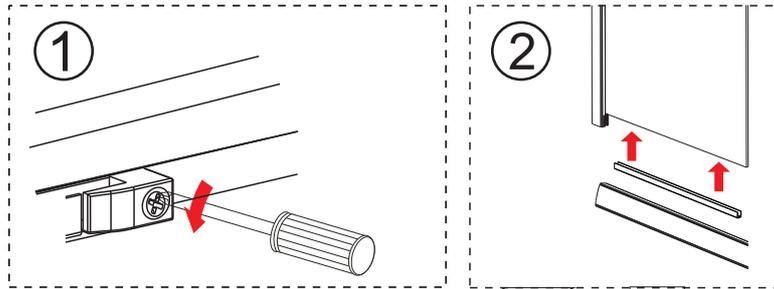


## Step 2

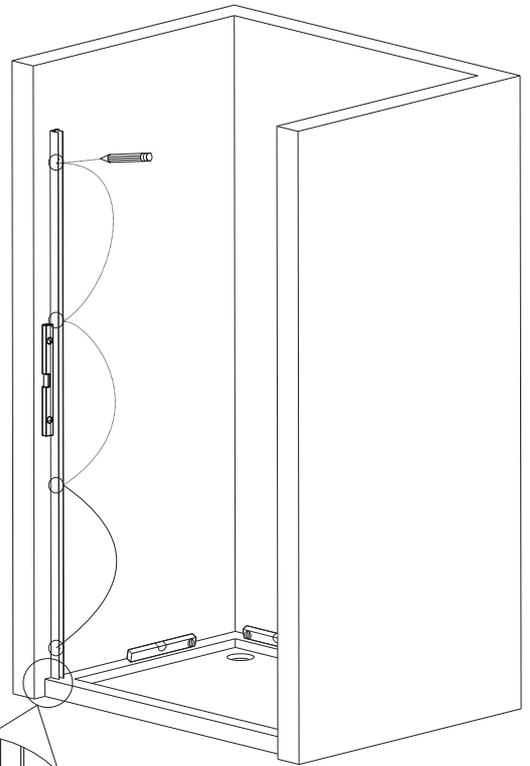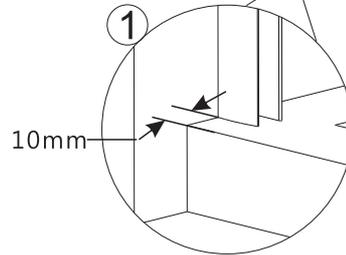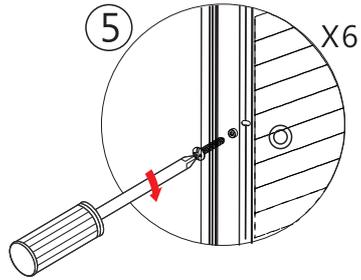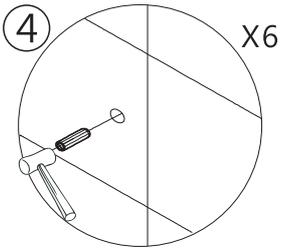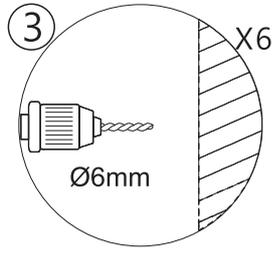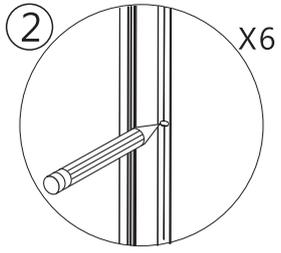


## Step 3

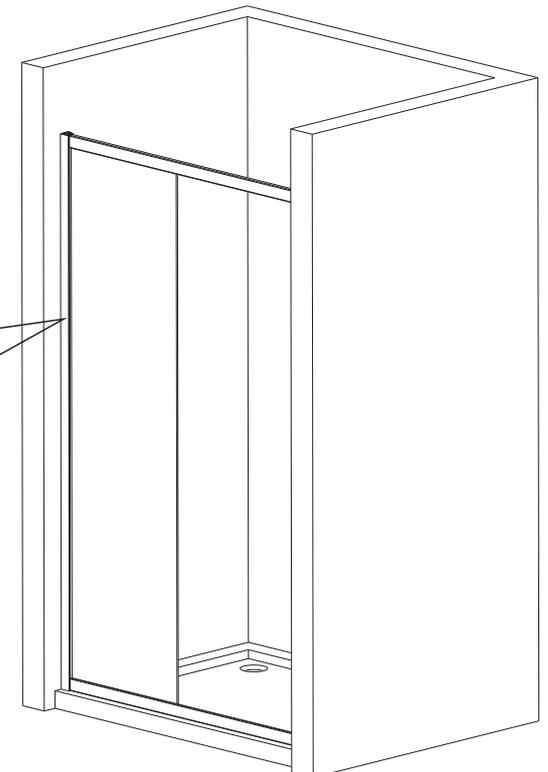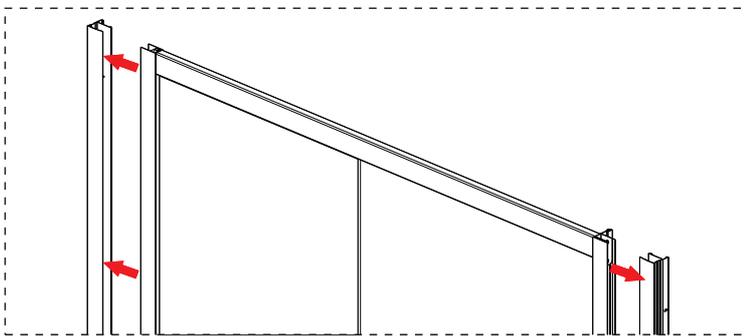


# Step 4

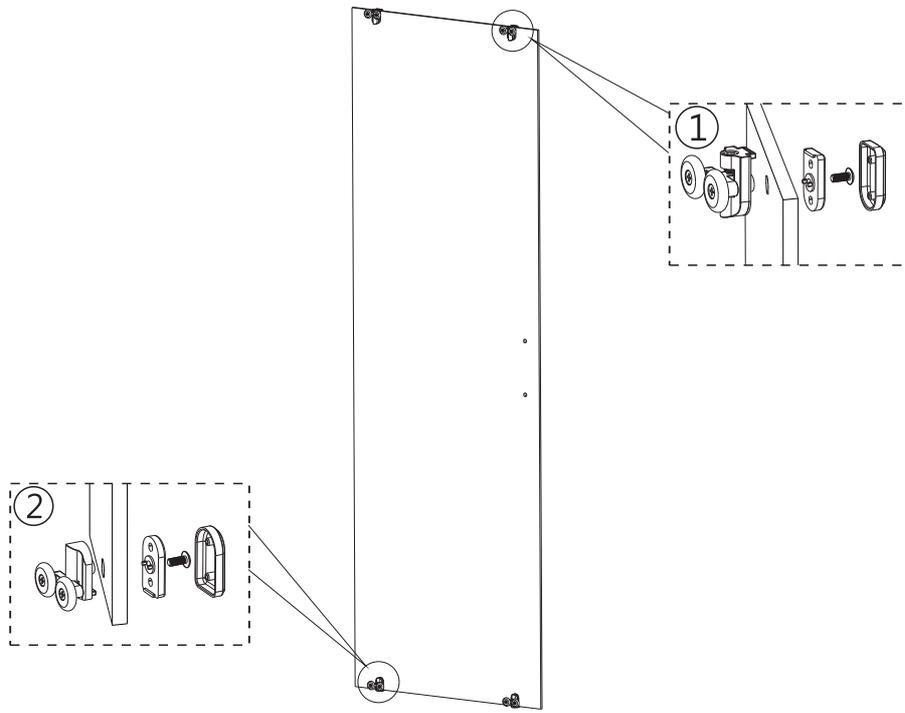


# Step 5

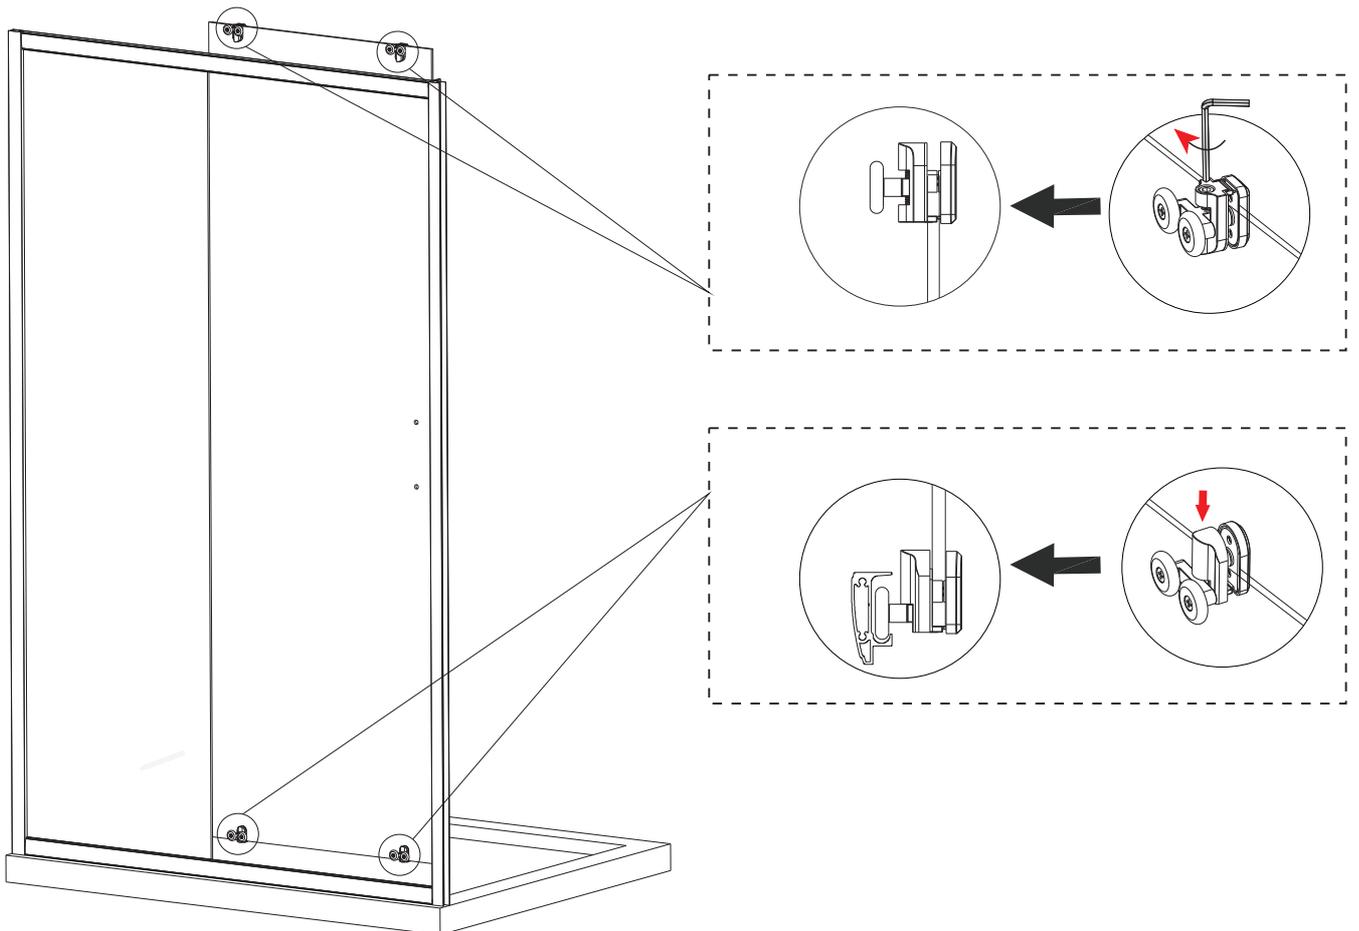


## Step 6

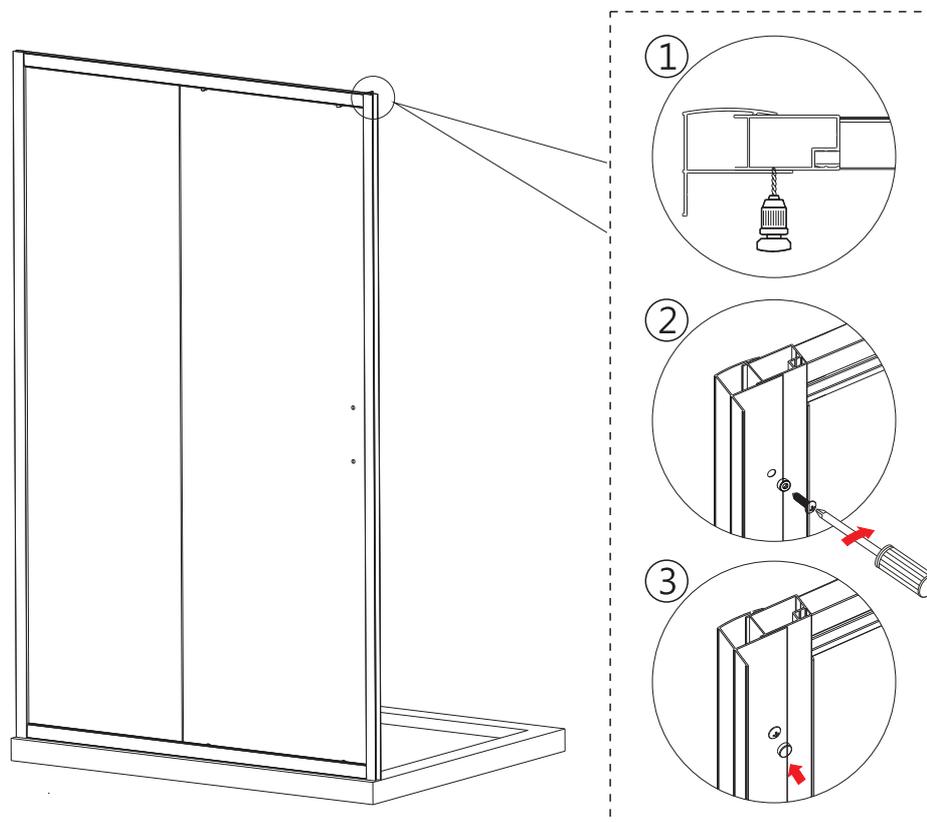


## Step 7

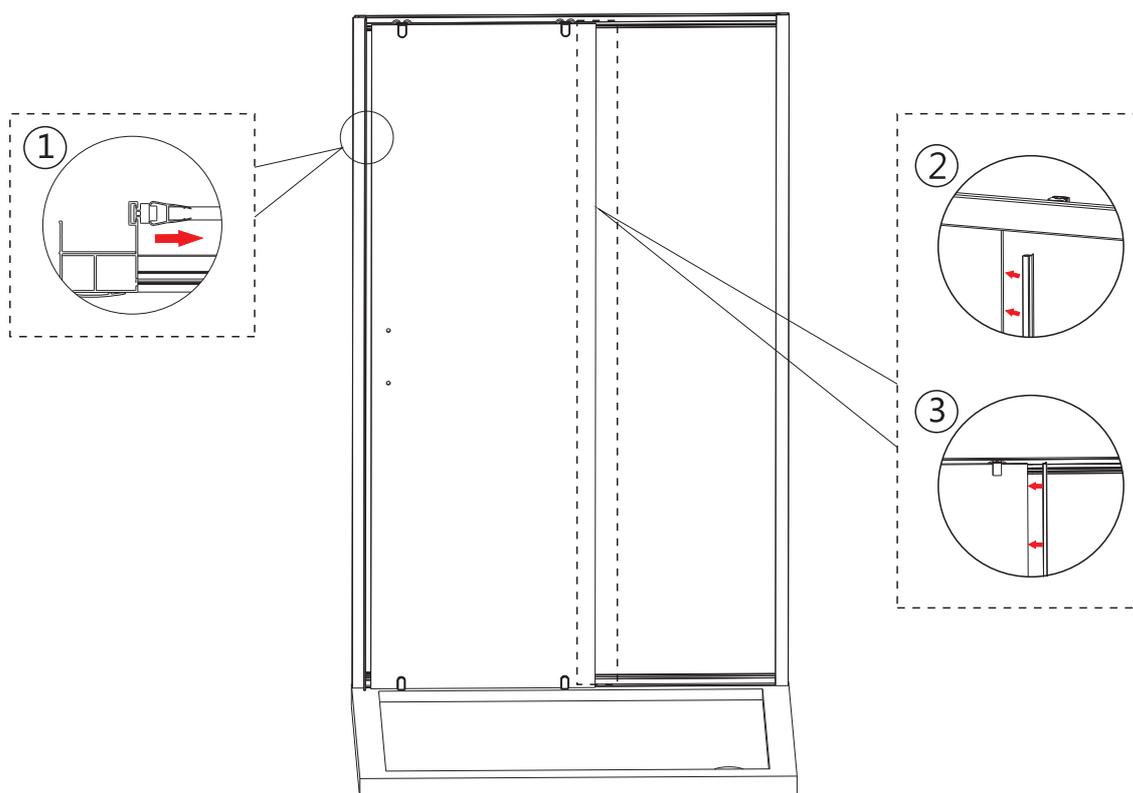

## Step 8

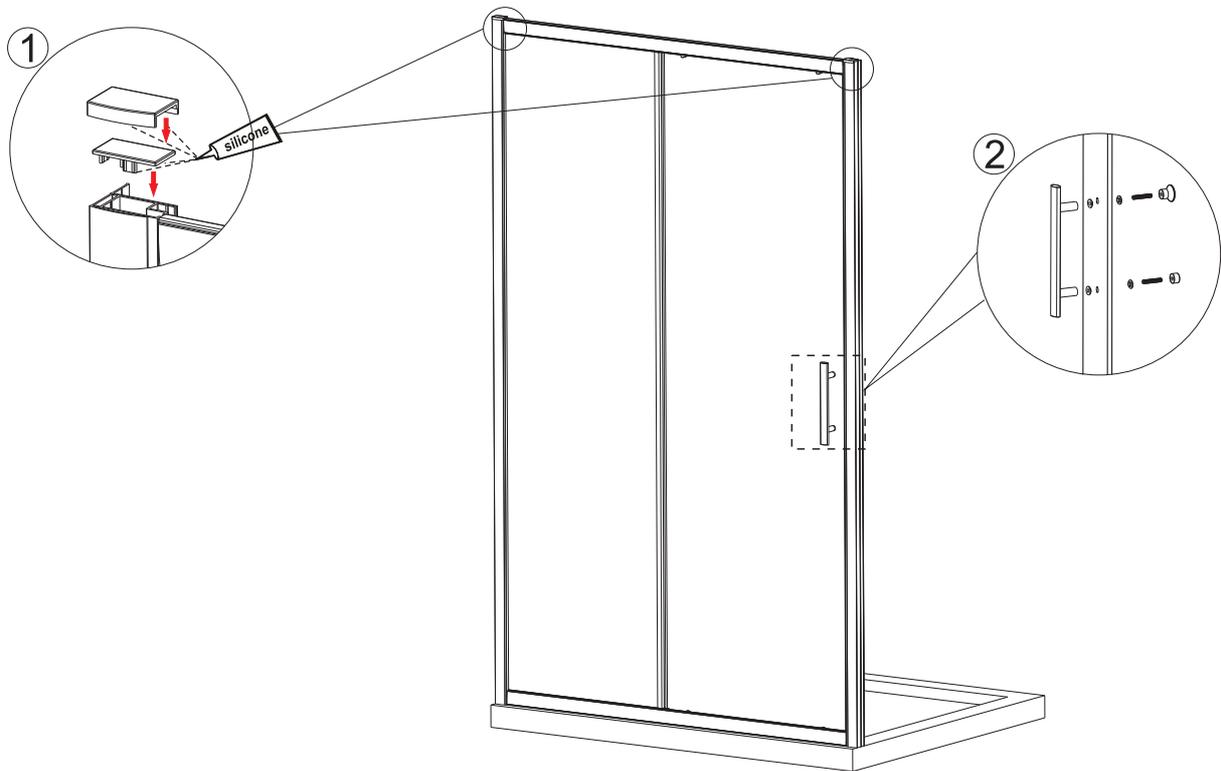

## Step 9

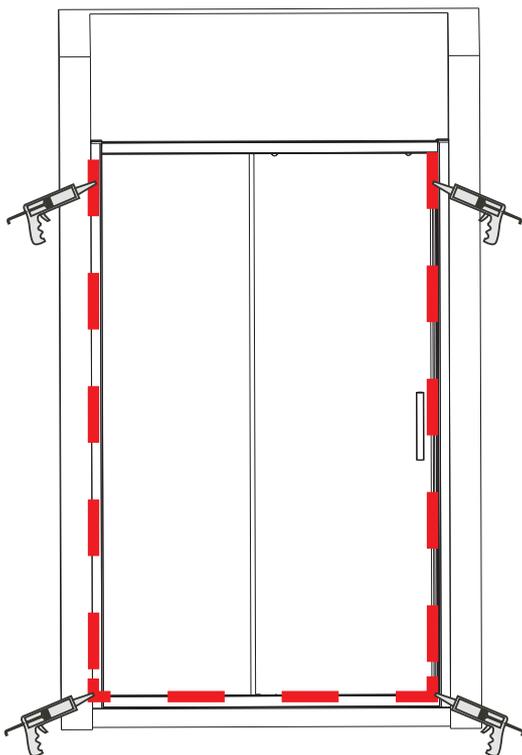

**Allow 24 hours for silicone to dry before use. Silicone on the outside edge only, NOT THE INSIDE**

### Aftercare instructions

Regularly clean your shower product with warm soapy water to prevent lime scale build up. **DO NOT** use abrasive cleaning fluids or materials, or strong chemical cleaners as this will damage the product surface.

## **Check out our full range of Shower Enclosures**

Quadrant Shower Enclosures

Corner Entry Shower Enclosures

Walk in Shower Enclosures

Sliding Shower Doors

Bifold Shower Doors

Pivot Shower Doors

Hinged Shower Doors

Shower Screens

## **From Top Brands**

Coram Shower Enclosures

Mira Shower Enclosures

Hydrolux Shower Enclosures

Diamond Shower Enclosures

## **With quality shower trays to match your enclosure**

Square Shower Trays

Rectangular Shower Trays

Quadrant Shower Trays

Coram Shower Trays

Mira Flight Shower Trays

**plumbworld**  
**Big brands, small prices.**