



8MM FRAMELESS SLIDING DOOR GUIDE

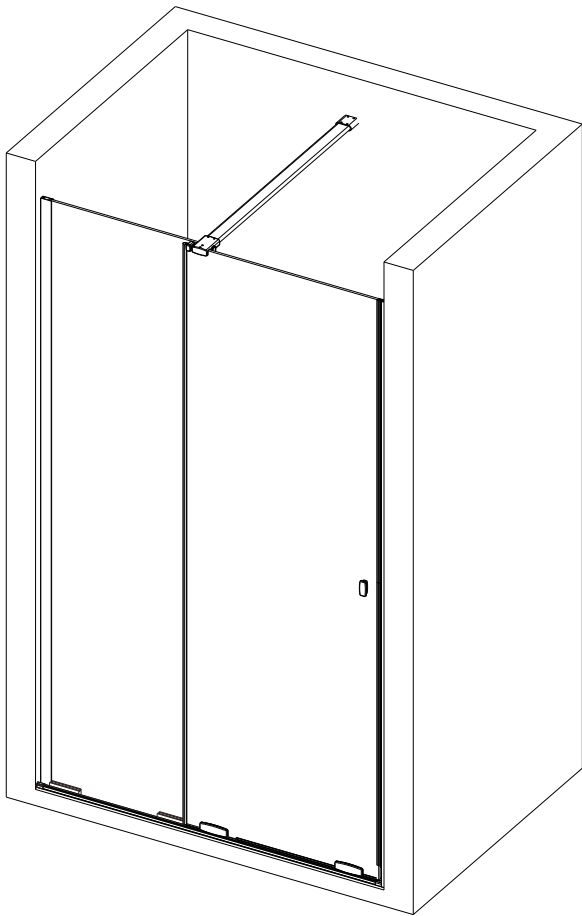

(A)

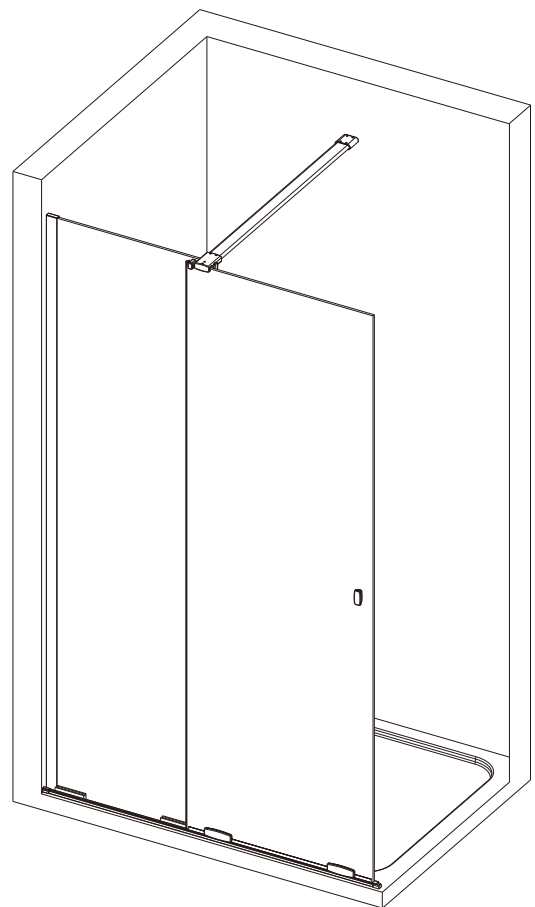












(B)

General Information


Please inspect this product upon delivery. Any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. TAKE CARE WHEN HANDLING GLASS PARTS-AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE. Glass breakage claims will not be accepted after the product has been unpacked.

TOOLS REQUIRED

DESCRIPTION	PART IMAGE	DESCRIPTION	PART IMAGE
Tape measure		Drill	
Spirit level		Flat-head Screwdriver	
Pencil		Cross head Screwdriver	
Ø6mm Drill bit		Mallet	
Ø3mm Drill bit		Silicone Sealant	

 This product is heavy and may require two people to install.

ASSEMBLY INSTRUCTIONS - DRAWING

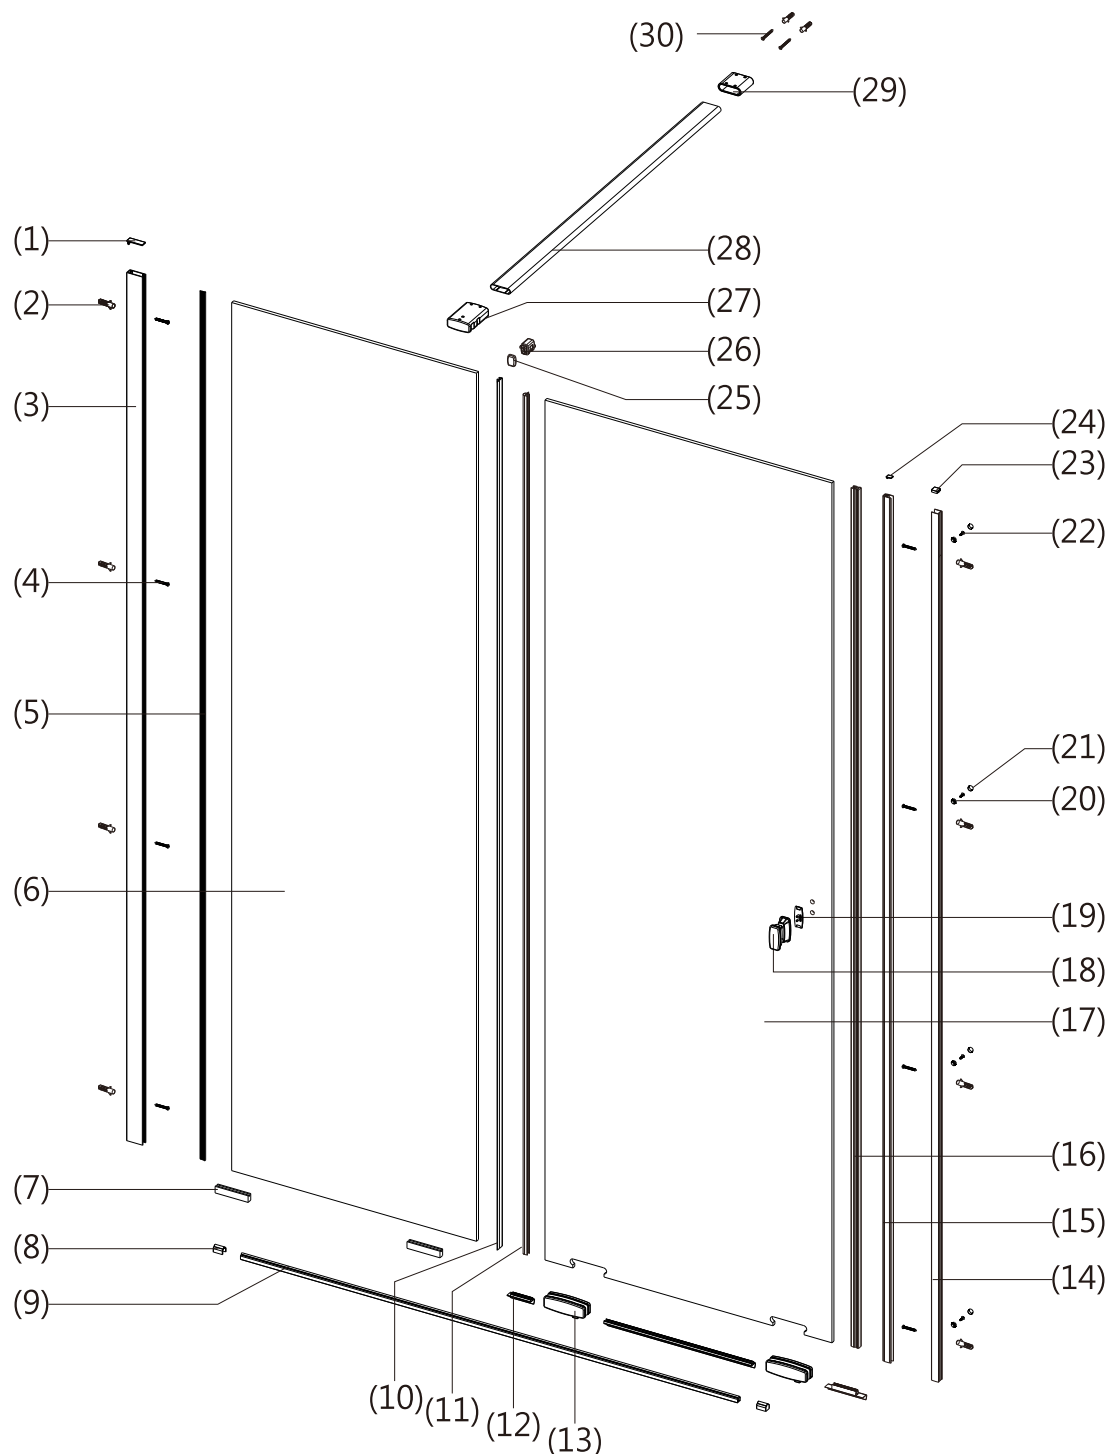

- (1) 1x Cover Cap (Wall Profile A)
- (2) 10x Wall Plugs
- (3) 1x Wall Profile A
- (4) 8x Round Screws ST4x30
- (5) 1x Singe Seal
- (6) 1x Fixed Panel
- (7) 2x Seals
- (8) 2x Drip Strip End Caps
- (9) 1x Bottom Rail
- (10) 1x Fixed Panel Seal
- (11) 1x Moving Panel Seal
- (12) 3x Bottom Seals
- (13) 2x Bottom Rollers
- (14) 1x Wall Profile B
- (15) 1x Magnet Profile






- (16) 1x Magnet Seal
- (17) 1x Moving Panel
- (18) 1x Handle
- (19) 1x Handle Cover Cap
- (20) 4x Screw Clips
- (21) 4x Screw Cover Caps
- (22) 4x Screws ST4x10
- (23) 2x Cover Caps L&R (Wall Profile B)
- (24) 1x Cover Cap (Magnet Profile)
- (25) 1x Roller Stop Cover Cap
- (26) 1x Roller Stop
- (27) 1x Glass Clamp
- (28) 1x Top Bar
- (29) 1x Wall Bracket
- (30) 2x Screws ST4x30

SLIDING DOOR RECESS INSTALLATION





Before Installation

Please ensure that the shower tray is level and checked with a spirit level.
The tray should be installed first. Tiles should then be tiled down to the tray.
The enclosure can then be installed.























Step 1 DRILLING WALL PROFILE TO THE WALL

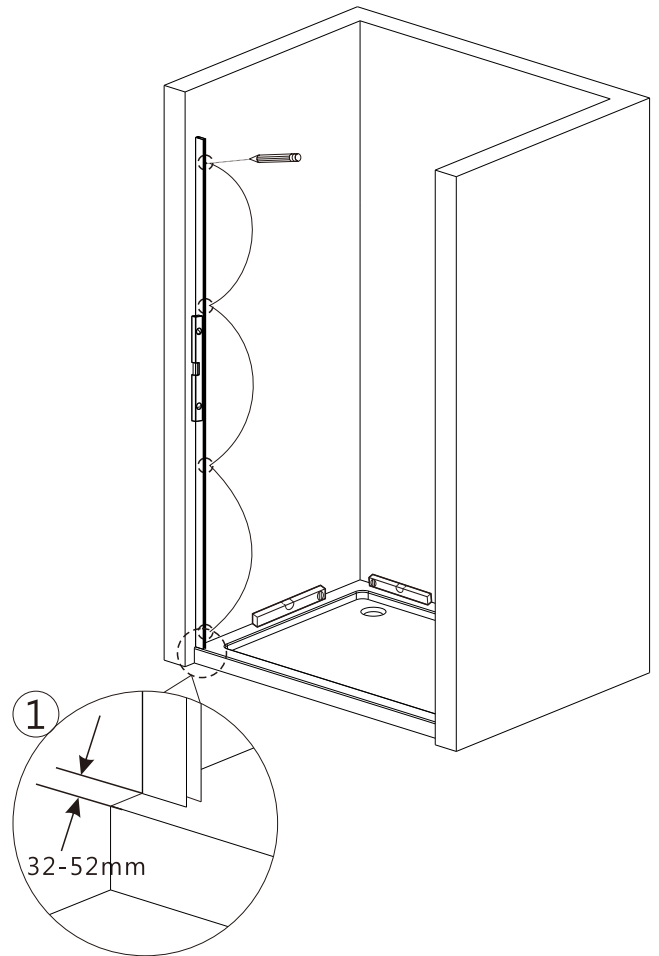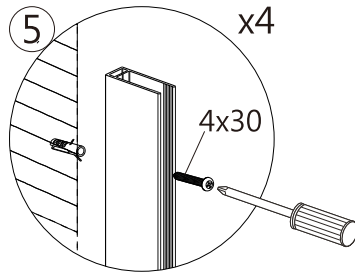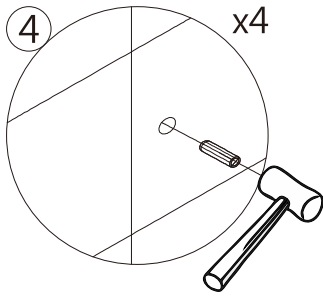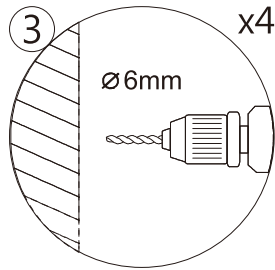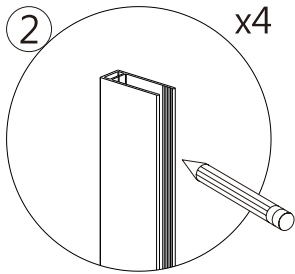



Step 2

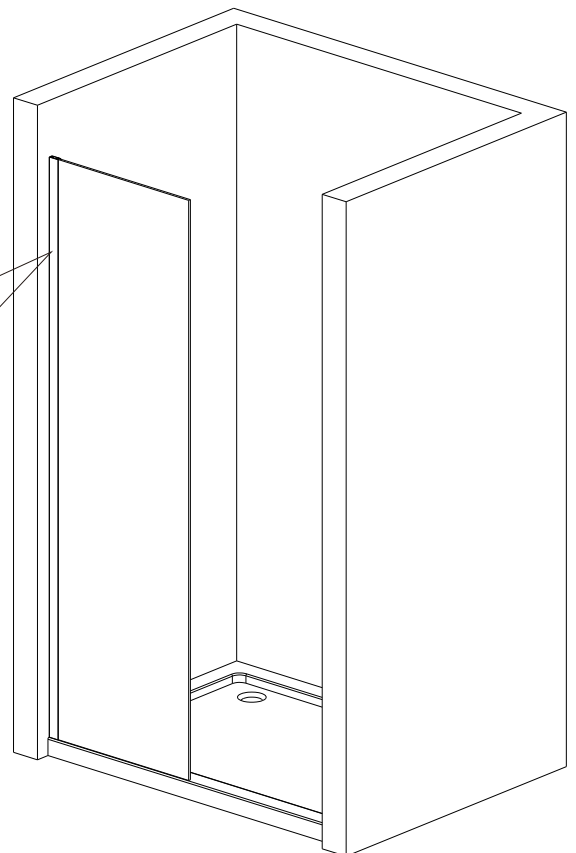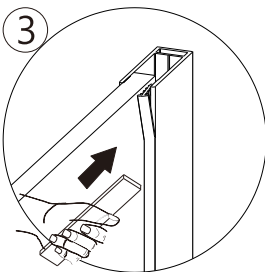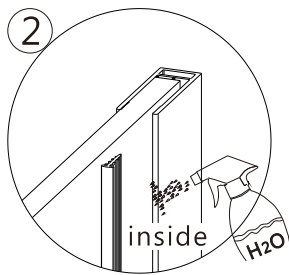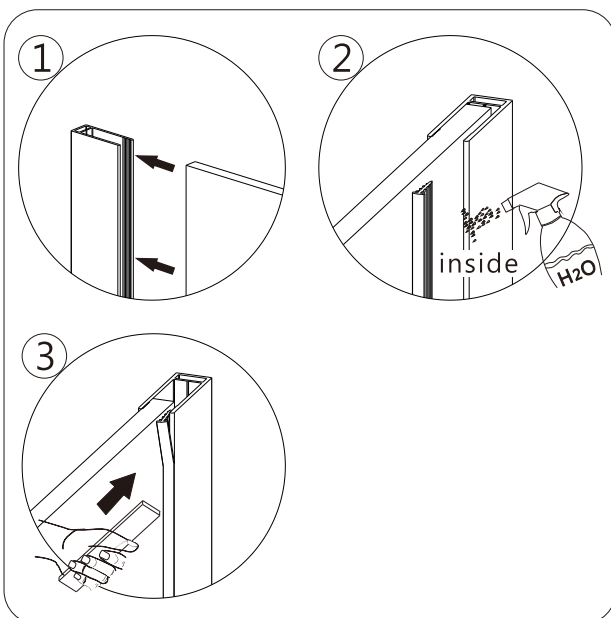



Step 3

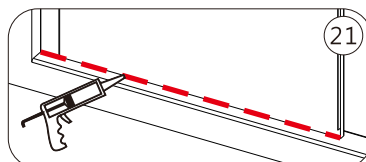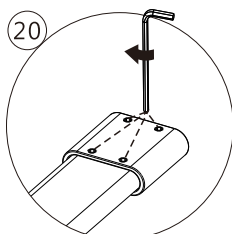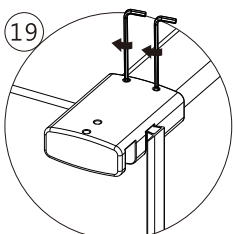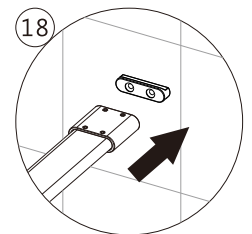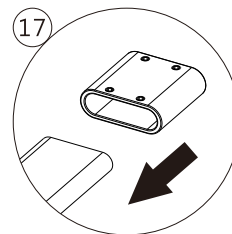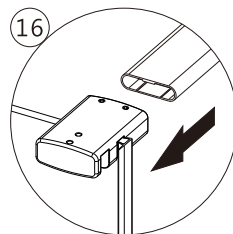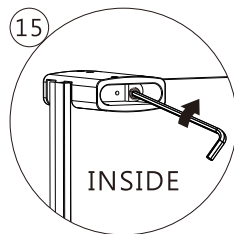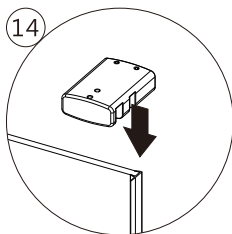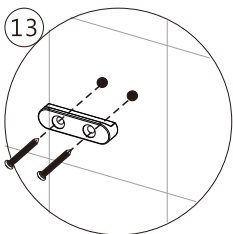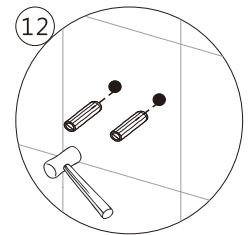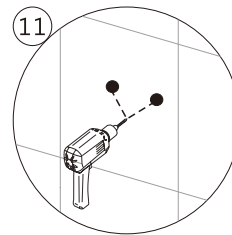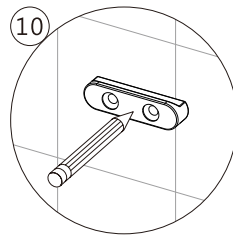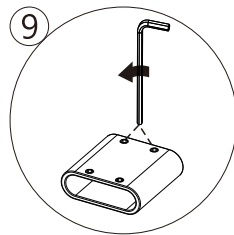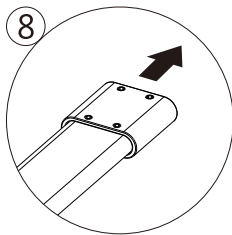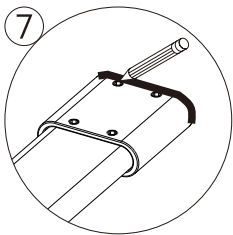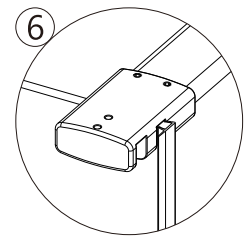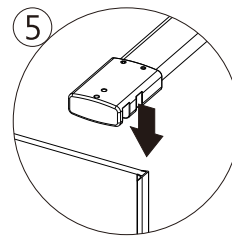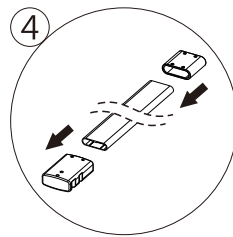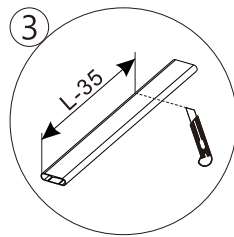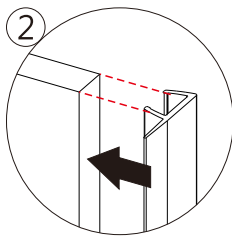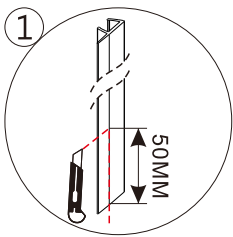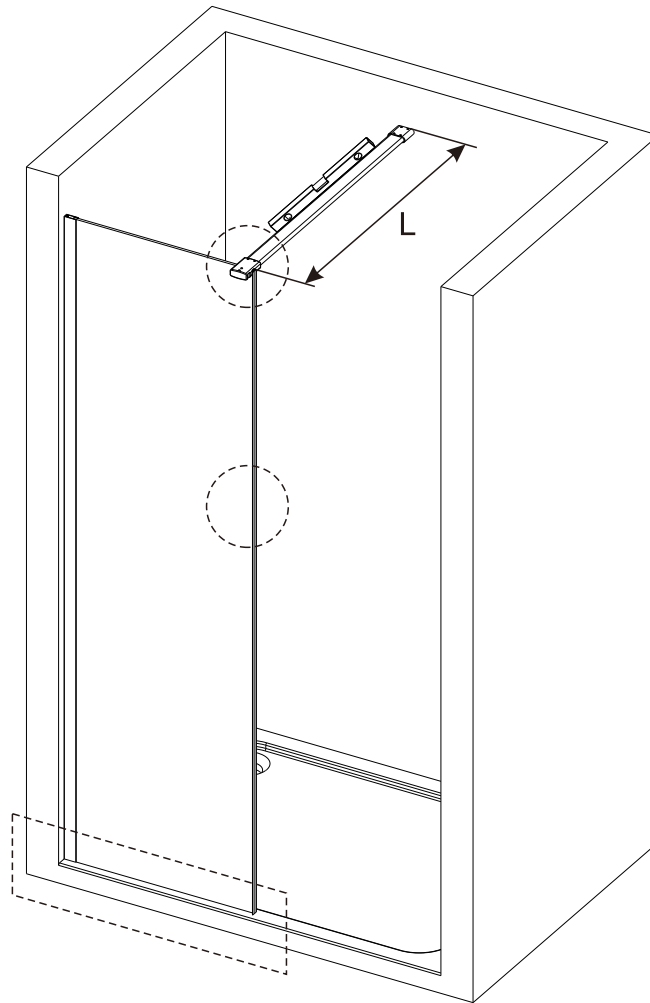








Step 4

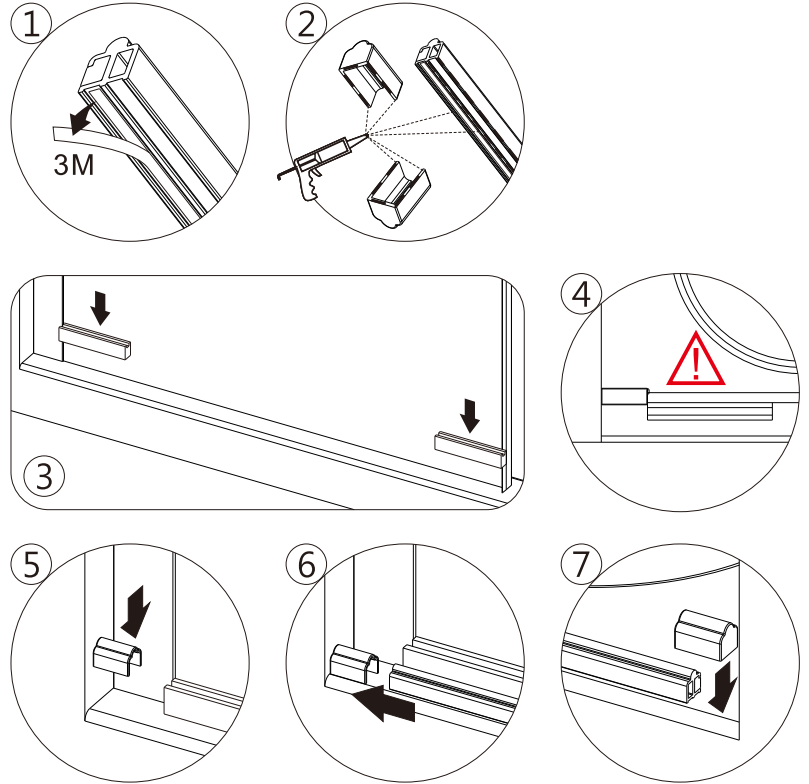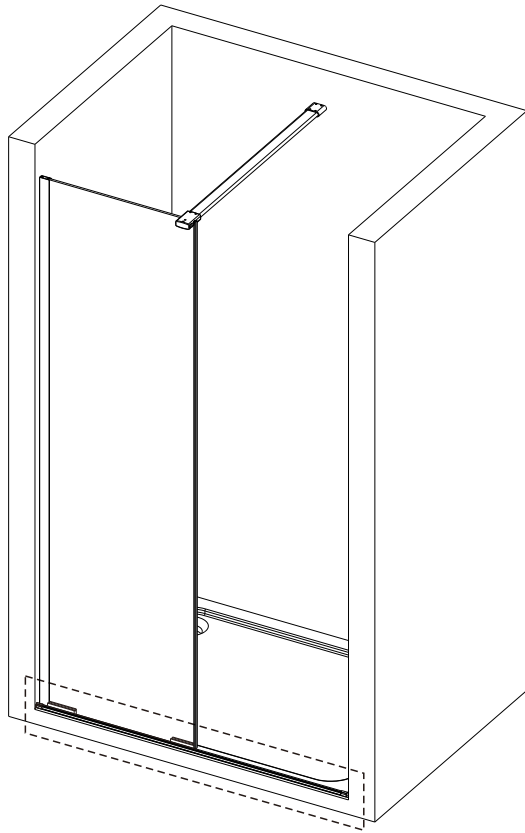





Step 5

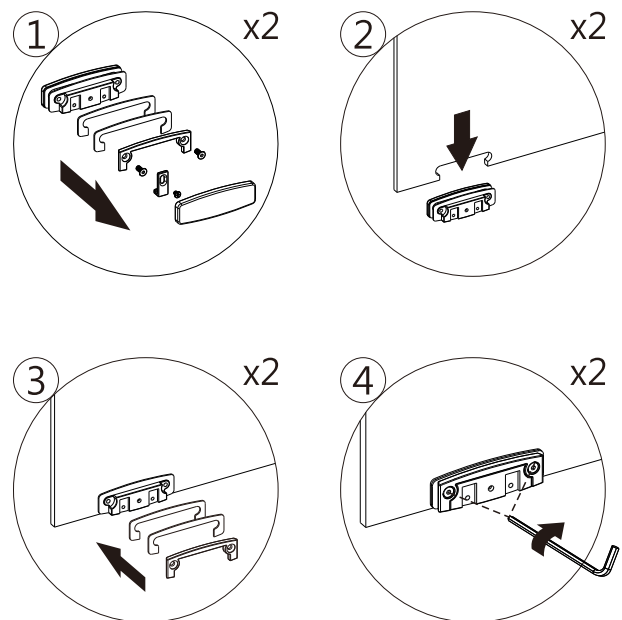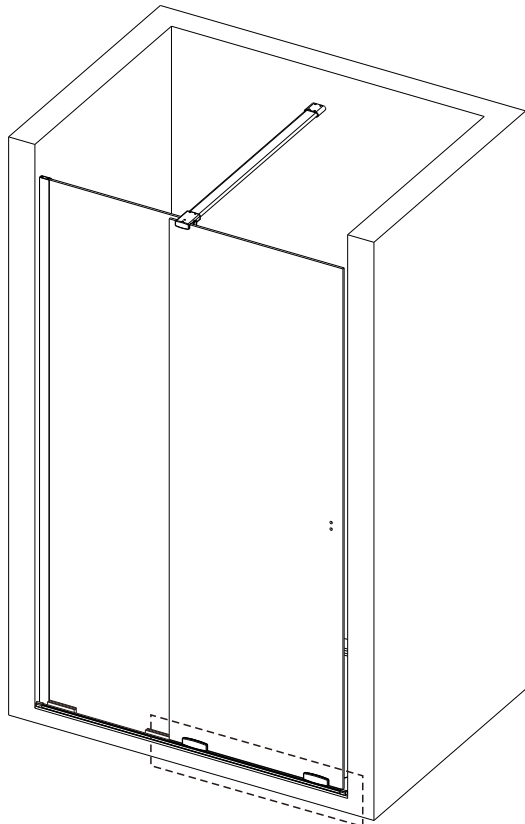






Step 6

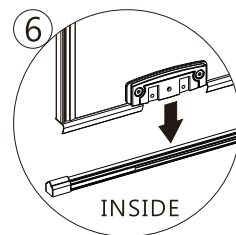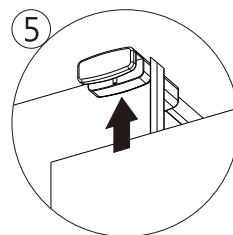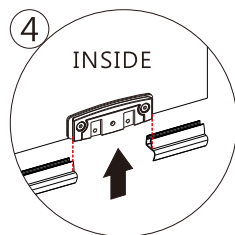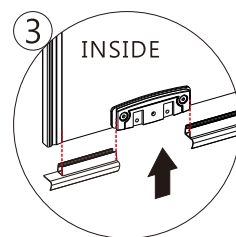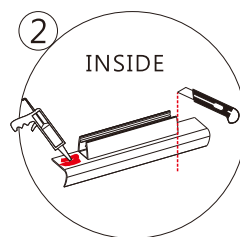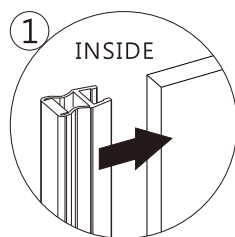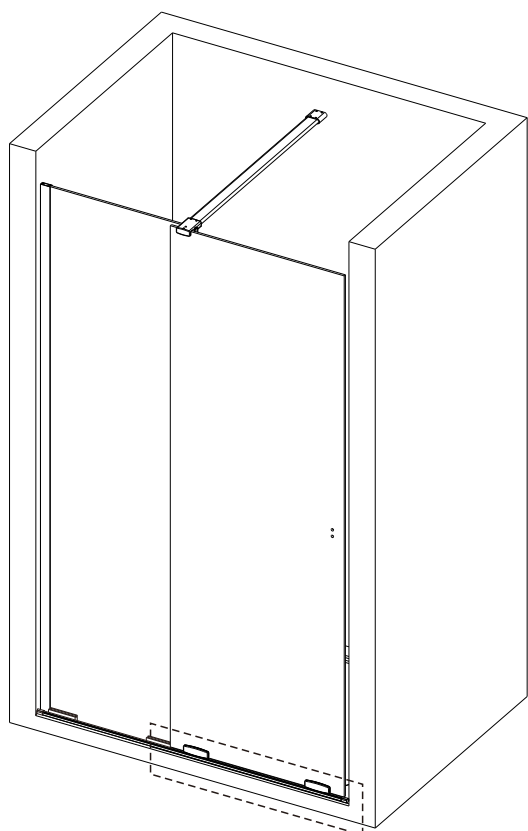












Step 7

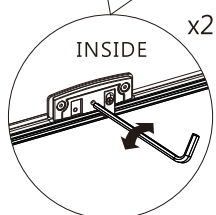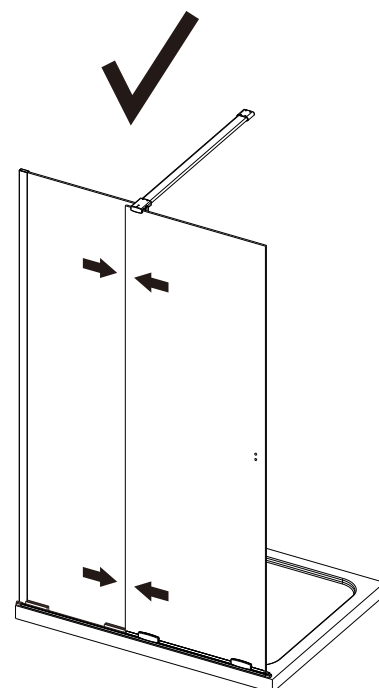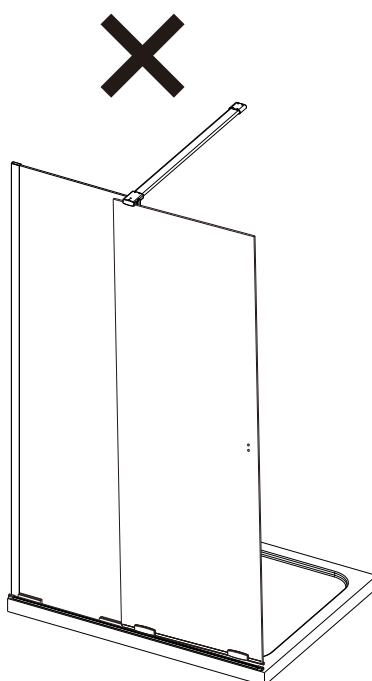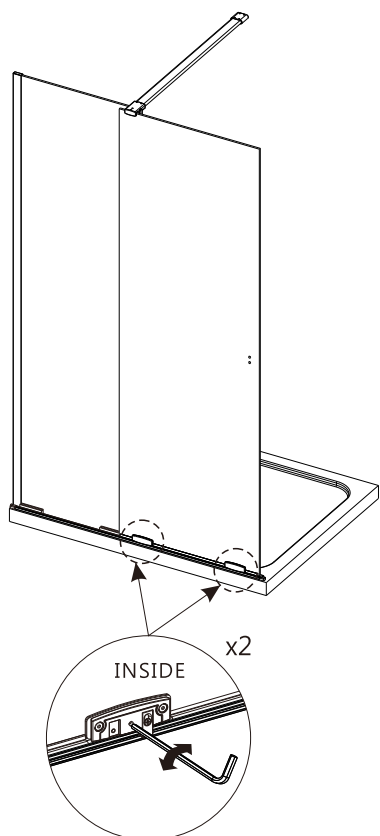






Step 8

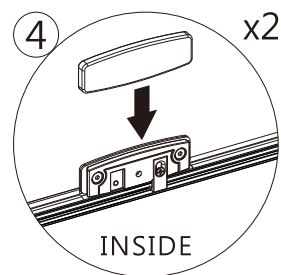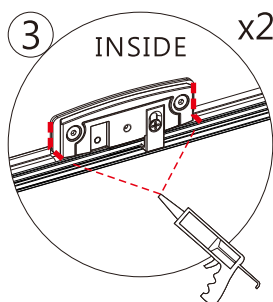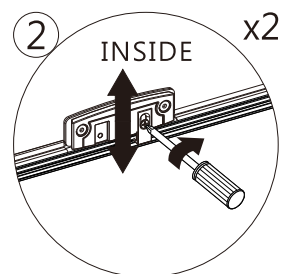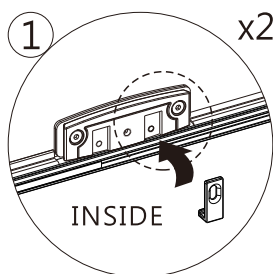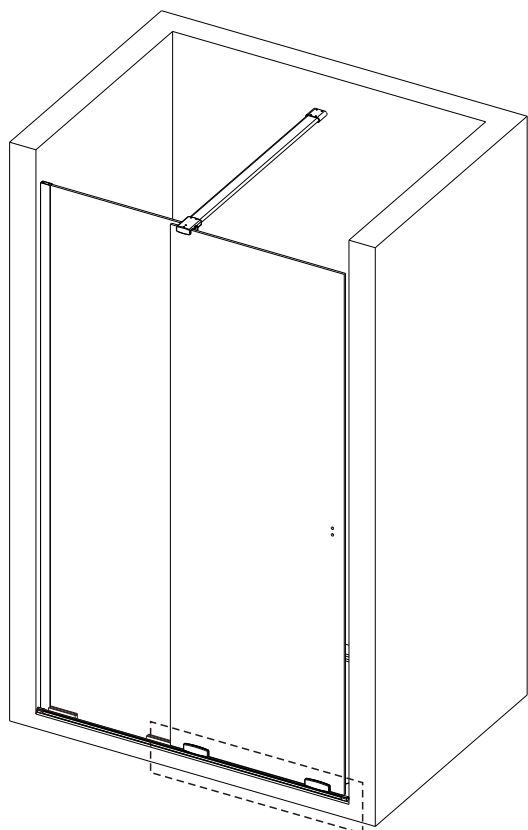





Step 9 If you make a wetroom sliding, then please ignore Step 9.

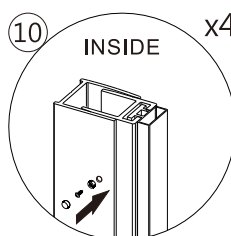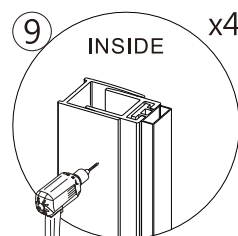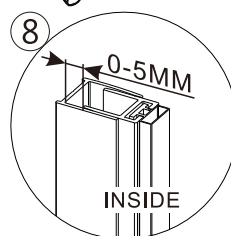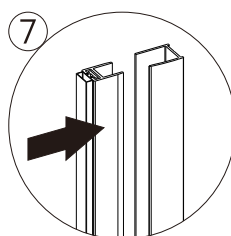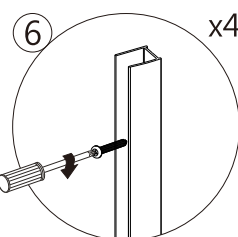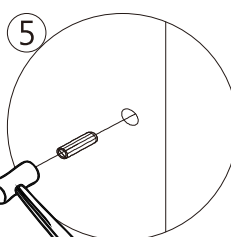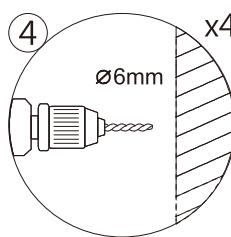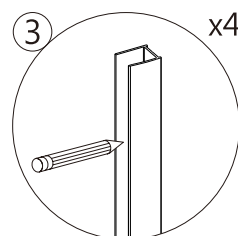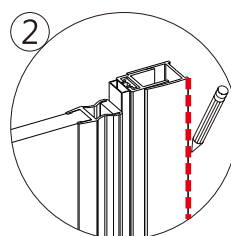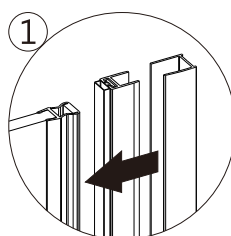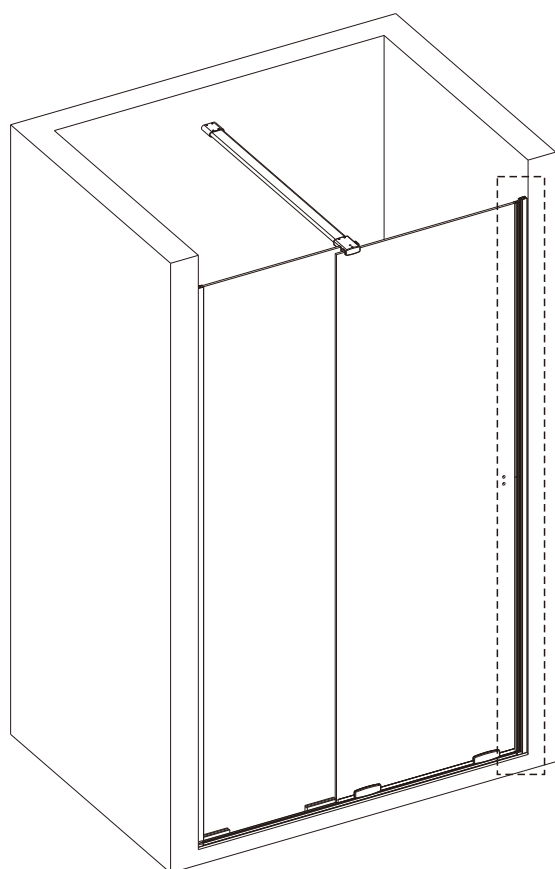


Step 10

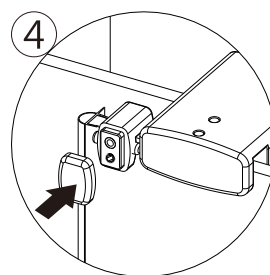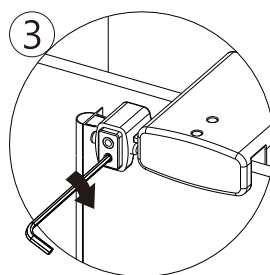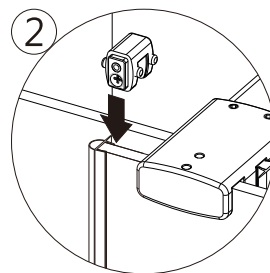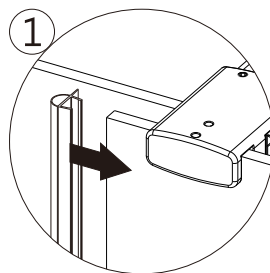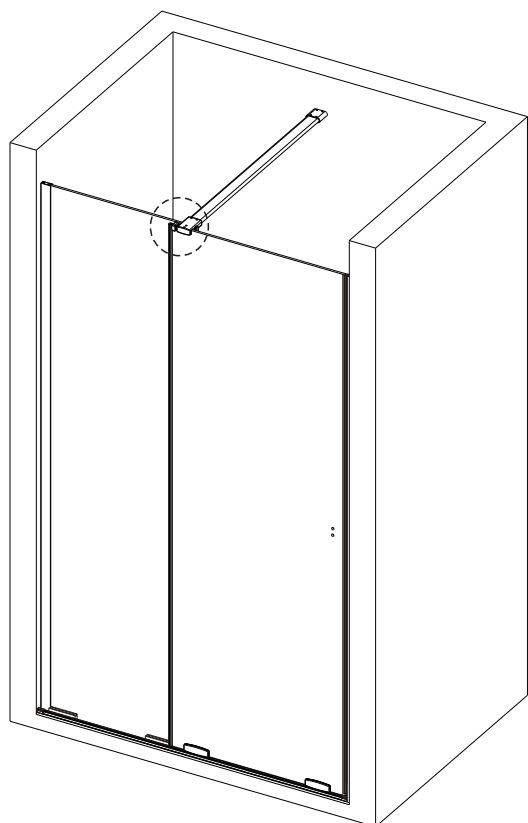


Step 11

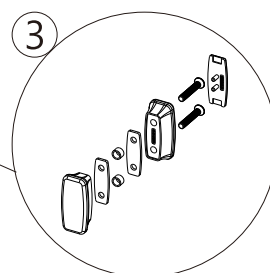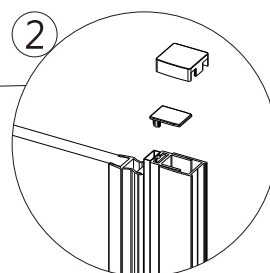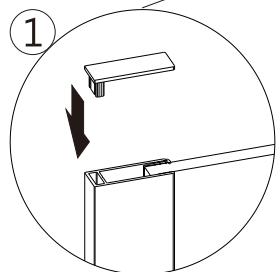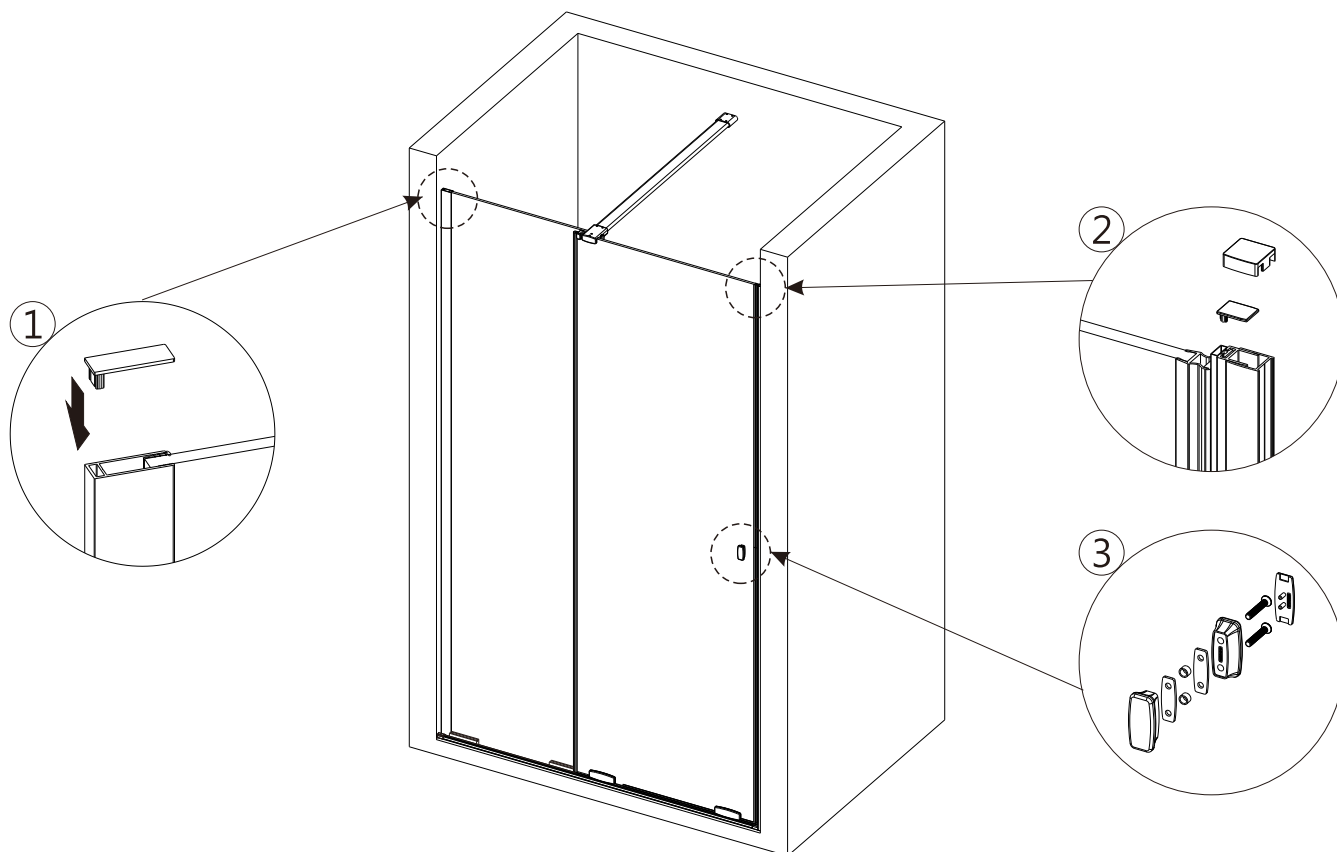

Step 12

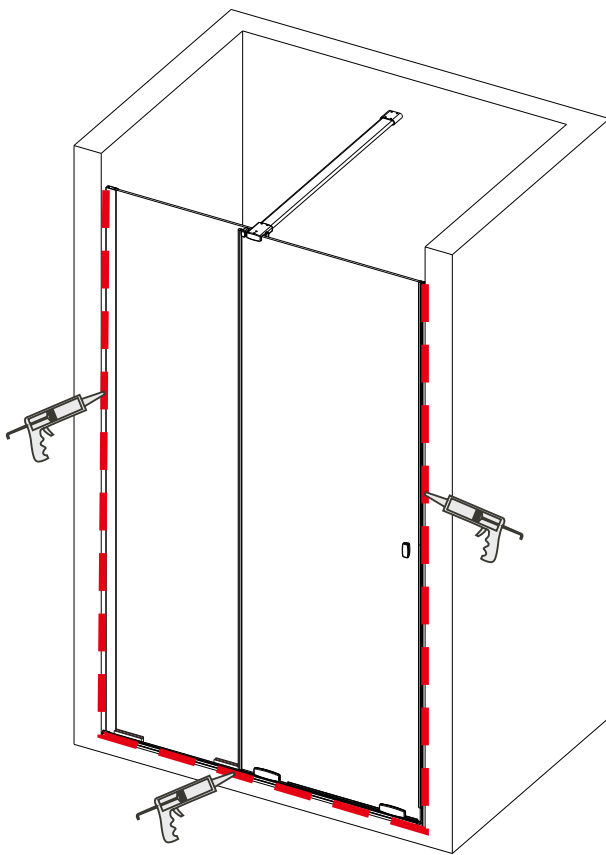

(A)

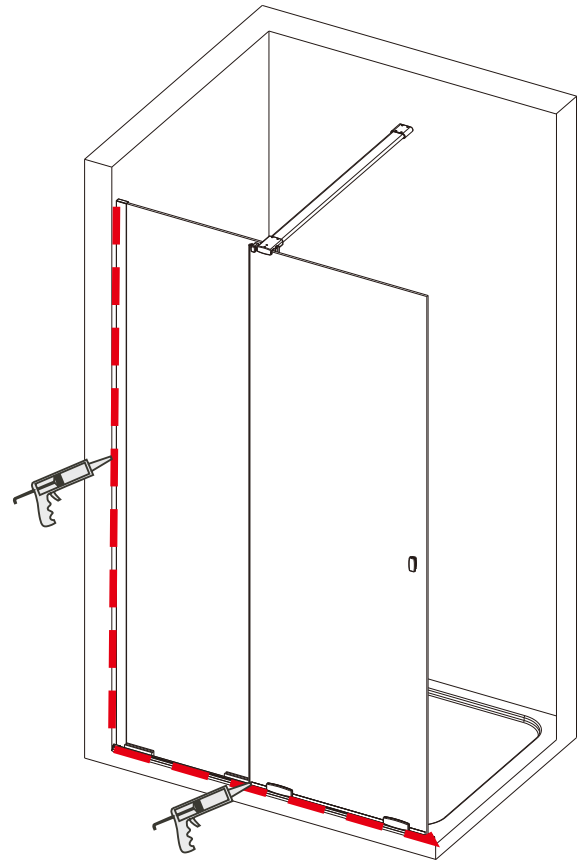

(B)



Allow 24 hours for silicone to dry before use. Silicone on the outside edge only, NOT THE INSIDE

Aftercare instructions

Regularly clean your shower product with warm soapy water to prevent lime scale build up. DO NOT use abrasive cleaning fluids or materials, or strong chemical cleaners as this will damage the product surface.