



# Installation Manual

## Tools you might need




- 1 Take the bath out of the carton, and then place bath in the place for installation.


The waste-overflow fitting is pre-installed

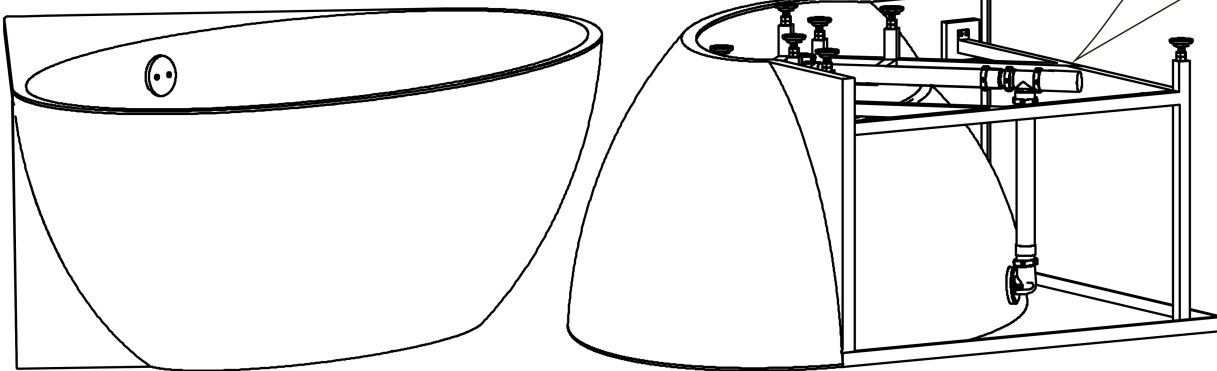

- 2 Place the bath upside down on a carpets or soft cloth, as rough surface will scratch the bath.

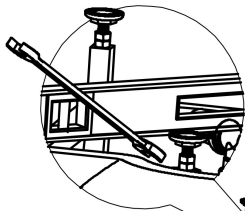


Levelling feet.

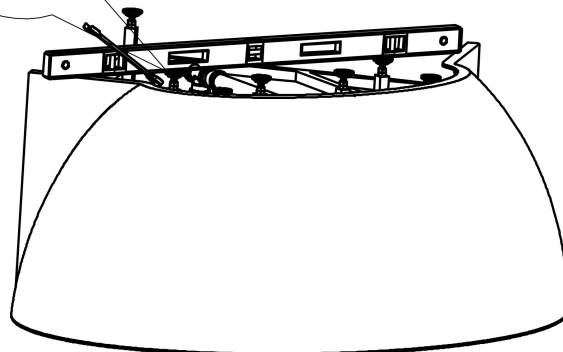

- ③ Connect the bath to the waste, and then turn the bath over, Then fill up the bath with water and check for any water leaks.


Method A

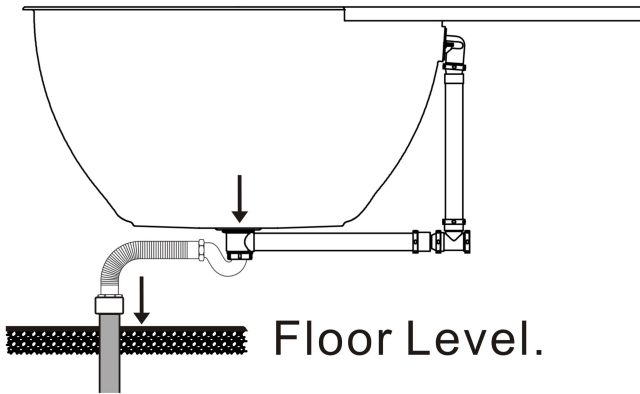

Floor Level.


Connect bath waste to bath trap and flexible waste connector.

Method B

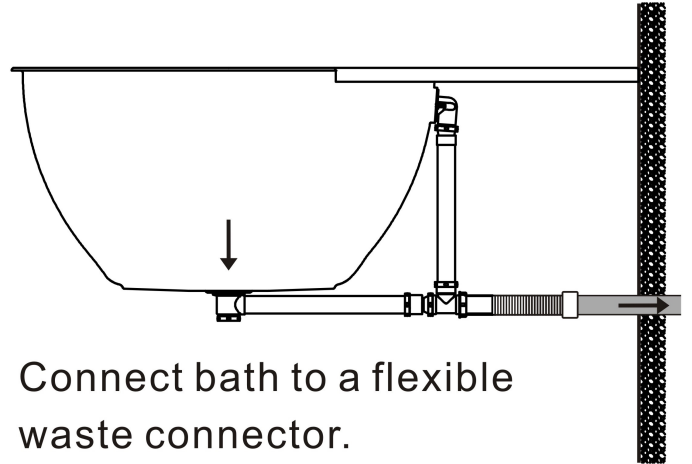

Connect bath to a flexible waste connector.

- ④ Apply silicone to the underside of the bath. Allow 24 hours for the silicone to dry off before use. The Installation and waste connection should be installed by a qualified person.

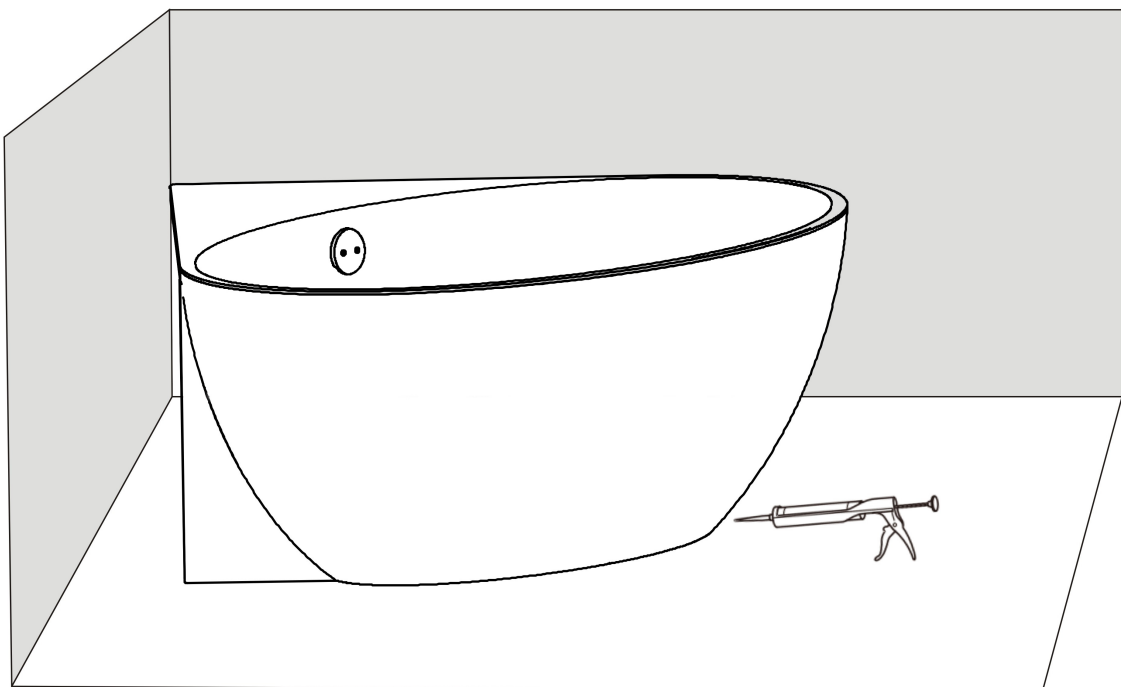

## **Check out our full range of Bathroom Suites**

Bathroom Suites By Range

Cloakroom Suites

Toilets

Bathroom Sinks / Wash Basins

Bidets

Baths

## **Wide variety of toilets**

Close Coupled Toilets

Wall Hung Toilets

Back To Wall Toilets

Furniture unit toilets

## **Huge Selection of Baths**

Acrylic Baths

Steel Baths

Shower baths

Freestanding baths

Small baths

Corner baths

Whirlpool baths

## **Don't forget the important bathroom suite extras**

Bath panels

Toilet seats

**plumbworld**  
**Big brands, small prices.**