


SQUARE SHOWER BATH PANEL ASSEMBLY INSTRUCTIONS

1. Push the Cams into the pre-drilled holes in the back of panels A,B,C and D as shown below.
2. Screw into place the Cam Pins as shown.
3. Push and glue in place the Wooden Dowels.
4. Glue all edges that are to be butted together, being careful not to get any adhesive on the decorative surfaces. Push the panels together one at a time and tighten by turning the Cams in a clockwise direction.
(any excess adhesive must be removed immediately with a damp cloth)
5. Fit the Corner Post between panels B and C. This can be fitted after the Bath has been installed if required.
6. Instruction shows the panel assembly for a L/H shower bath. For a R/H version assemble the panels in reverse.

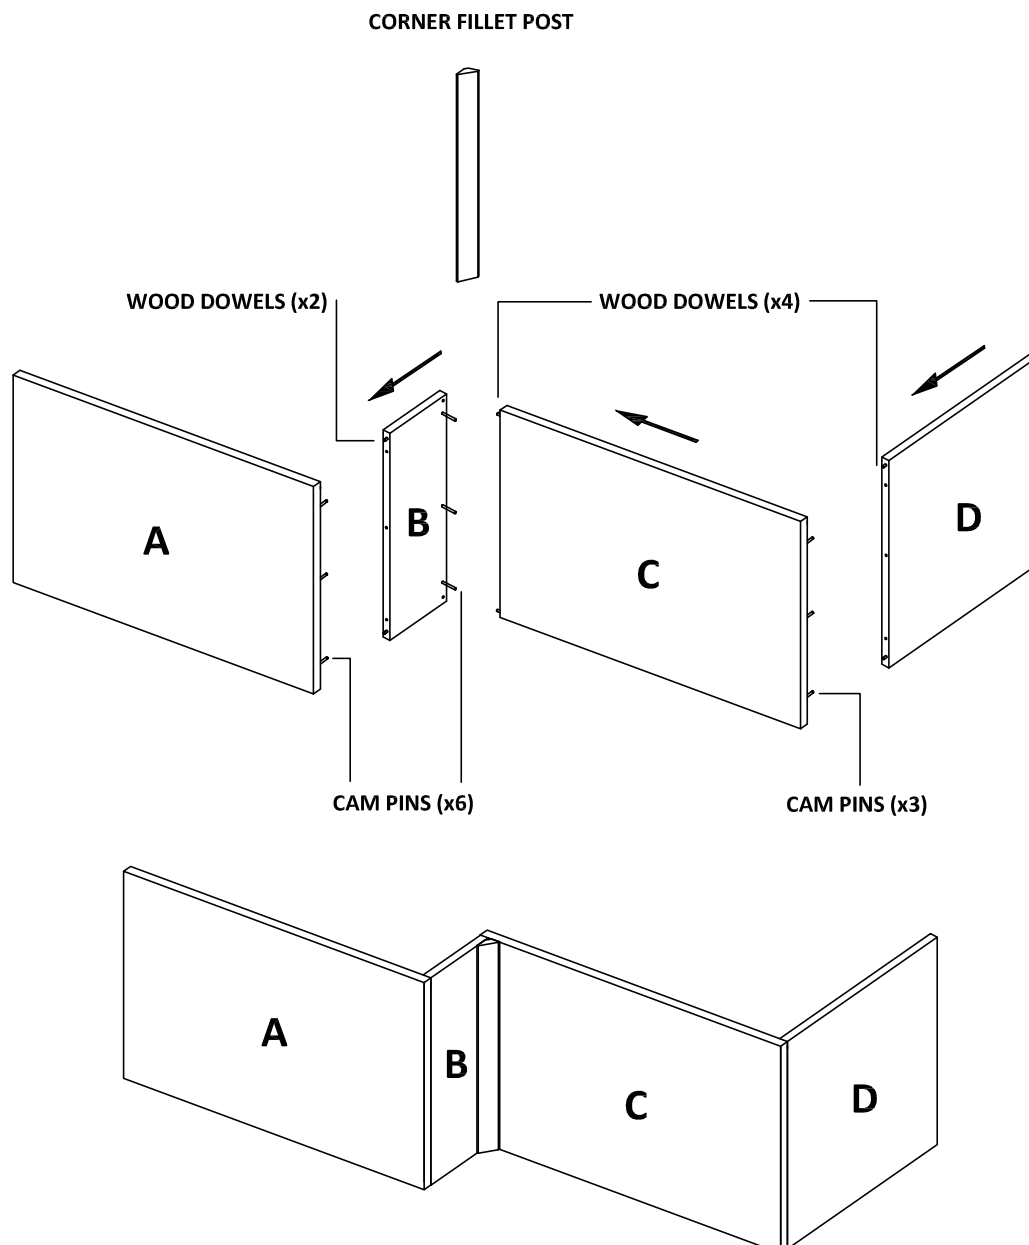

plumbworld
Big brands, small prices.

Pdf Supplied By <http://www.plumbworld.co.uk/>