



**ALWAYS** read these installation instructions carefully before installing this product and leave with the end user.



**ALWAYS** match the correct waste to the shower base.



**ALWAYS** have the waste installed by a trained and experienced skilled craftsman.



**DO NOT** place matches or cigarettes on or near this product. The following plastic materials are used in this product:  
Acrylonitrile Butadiene Styrene (ABS),



**BEWARE** A child finger trap may be present during the handling or use of this product.



**ALWAYS** Keep fingers clear of the gaps between the cover, and the locking ring.

**Failure to install this AKW MediCare product in accordance with supplied instructions or the making of unauthorised modifications will invalidate any warranty and will affect product safety.**


The measurements throughout these installation and user care instructions have been converted from metric to its equivalent in imperial, therefore all dimensions are approximate and subject to manufacturing tolerances. This information is furnished upon the condition that the person receiving it shall make his/her own tests to determine the suitability thereof for his/her particular purpose.

AKW Medi-Care Limited, Liberty House, Pointon Way, Hampton Lovett, Droitwich Spa, WR9 0LR  
Tel.+44 (0) 1905 823298 - Fax. +44 (0) 1905 823297 - [www.akw-medicare.co.uk](http://www.akw-medicare.co.uk)

**AKW**  
life. style. choice.



## **Tuff Form<sup>®</sup> Waste Adaptor** **Installation And User Care Instructions**

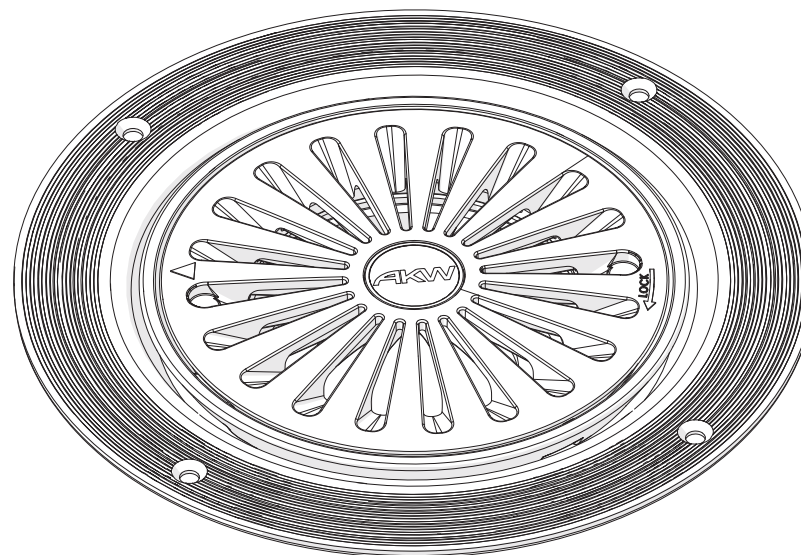

**Wet Floor Former, Waste Hole Reducer**

Colour: White

Internal Building use only

Registered Design 000135702-0009

***Installer: Please ensure that this information is left with the end user of this product.***

For full waste specifications see the current AKW MediCare catalogue.

## Installation Instructions

Follow the instructions provided with the gravity waste (11). Do Not fit the waste top cover as this is replaced by the TFWA cover.

As a "dry run" first place the wet floor former into the desired location and determine the position and depth of clearance required to position the waste trap.

Before installation check the wet floor area slopes correctly towards the waste and the waste outlet pipe slopes down and away from the waste position by approximately 25mm per metre run (1 in 40).

Ensure the waste trap has the correct seals in place; place the TFWA dish (1) over the waste position;

Fit any remaining waste trap seals, top locking and / or retaining ring(s) in place;


Screw these parts together tightly to achieve a waterproof joint between the waste and the TFWA;

Finally fasten down the TFWA (1) to the wet floor former (2) using Qty 4 countersunk head screws (3). Ensure the heads are flush and do not protrude or they may damage the wet floor covering. Ensure the former and waste are correctly supported from below.

Install the wet-floor covering (4) ensuring all of the manufacturer's instructions are followed. Trim the wet-floor covering to fit the TFWA opening and align and fit the clamp ring (5) with qty 4 M6 stainless steel screws (6).

Position the grid cover (9) over the assembly, align the arrows and rotate the cover clockwise until the lugs snap into place.

**For added security remove the two screw knock-outs and fasten the cover using the Qty 2 M4 stainless steel screws (12).**

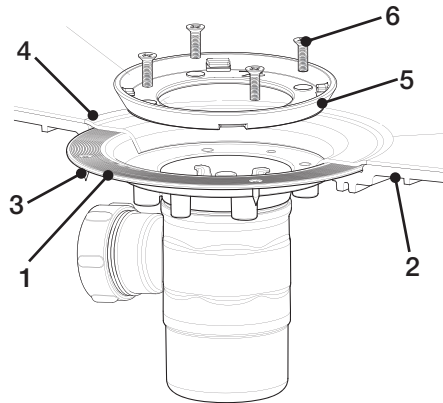

## User Care Instructions

The TFWA is designed for low maintenance and reliable operation.

As part of a regular maintenance programme check and clean the waste trap located inside the TFWA by the installer.

First remove the top cover by removing the two M4 screws (if fitted), rotate the cover anti-clockwise and lift off, which will give you access to the waste installed into this product. Follow the cleaning instructions provided with the waste trap fitted into this TFWA.


Clean these parts using warm soapy water. Also flush and wash down the inner body of the trap in the floor using warm soapy water or normal domestic bathroom cleaning materials.

**Do not** use strong or concentrated acidic or alkaline cleaning materials as these may discolour or otherwise damage the product.

AKW do not approve or recommend autoclave cleaning of any of the components due to the damage this can cause to the special engineering plastics used in the construction of this product.

Flush clear of all residues using clean water.

Reassemble to trap according to the instructions provided by the installer for the waste trap installed, and then refit the top cover and the two M4 screws if required.

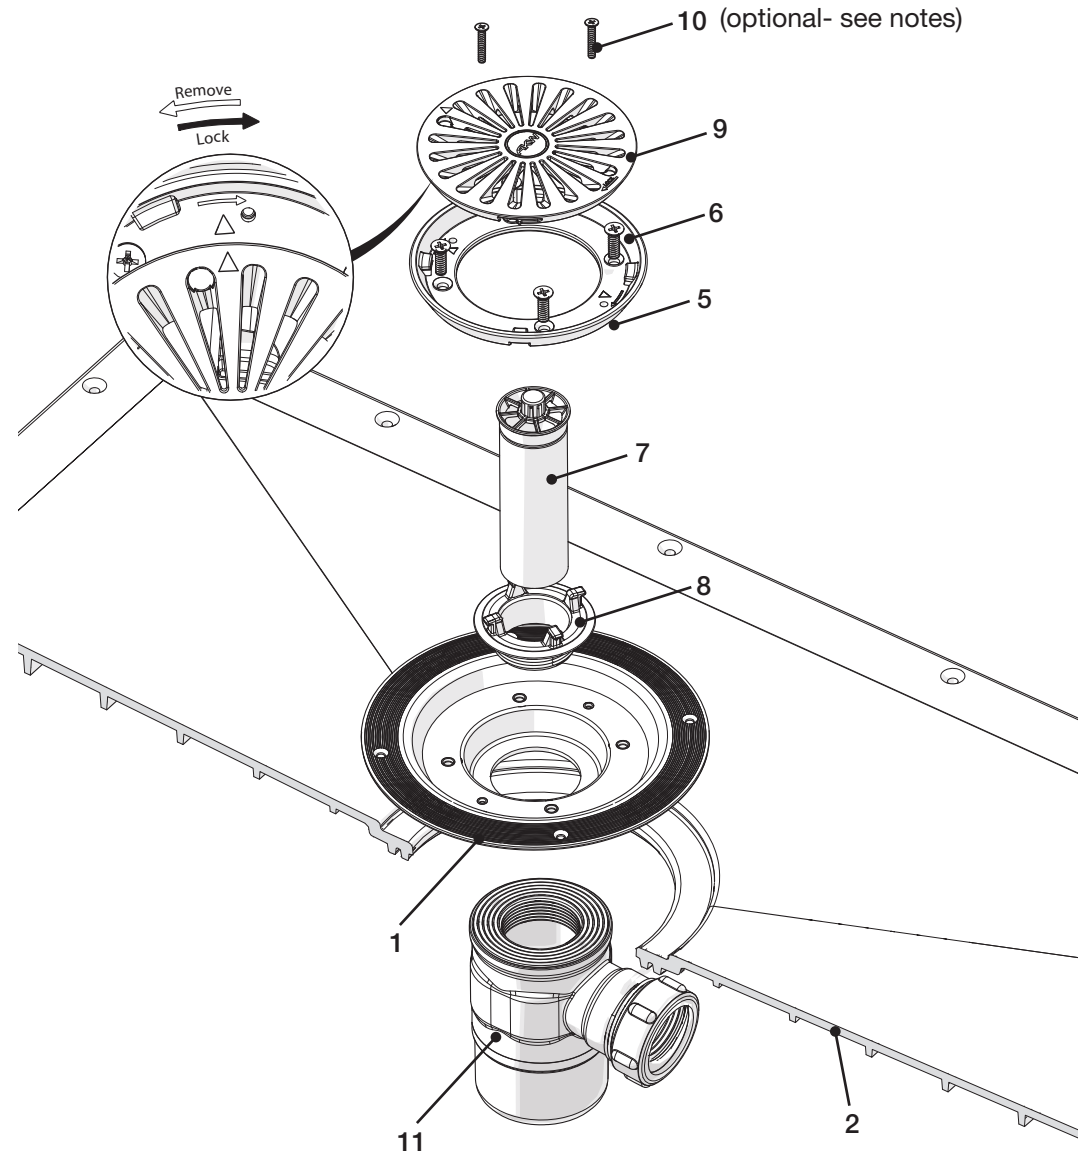

**Sectioned floor view of the Tuff Form Waste Adaptor**