

SMART VAPE DETECTOR

QUICK START GUIDE

1

Download the free 'Tuya Smart' App from the Google Play store or App store.

Tuya Smart




2

Create an account on the app using a common email address, therefore multiple users can log in and see the device status and receive notifications.


3

Once logged in, click on "add device". (Please ensure you are connected to 2.4Ghz Wi-Fi and Bluetooth is switched on)

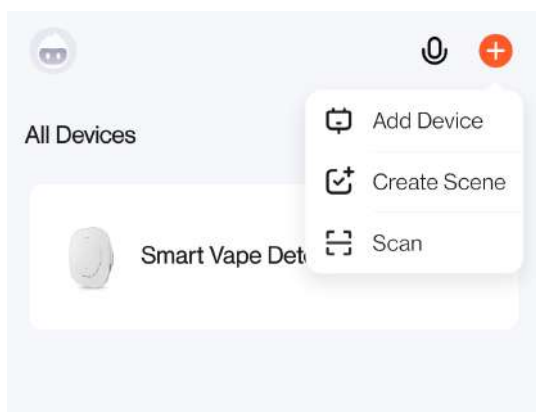


4

The Vape Detector device should appear on 'Add Device' screen. Click Add. (If not, ensure the vape detector is switched on and you are near the device, hold the networking key in the networking hole for 5 seconds to re-enter pairing mode).

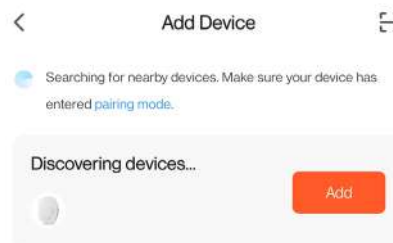

5

The device should now download onto your app, click 'Done' once finished.

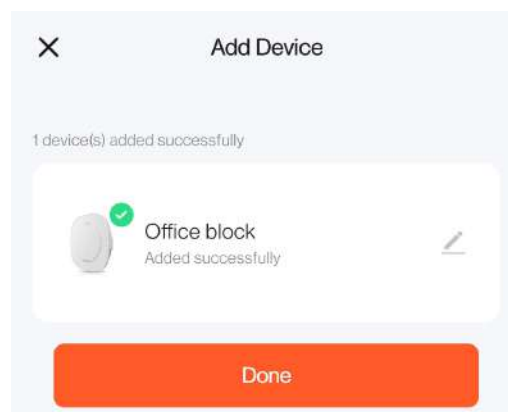

SCAN ME

To visit the online product page on our website for specs, datasheet, FAQs and place orders (via account).

Hispec Electrical Products Ltd

Unit 21, Drumhead Road
Chorley North Business Park
Chorley, Lancashire, PR6 7BX


www.hispec.co.uk

customerservices@hispec.co.uk | 01257 262197

SMART VAPE DETECTOR


6

The device is now ready to detect vape! You can set the alarm notification threshold by clicking the 'Settings' tab on the vape detector status page. Ensure the notifications sliders are in the 'on' position to receive all alarm notifications. Your phone/tablet may have its own permissions in device settings, these settings must be set to 'Receive all notifications' from the Tuya Smart App.

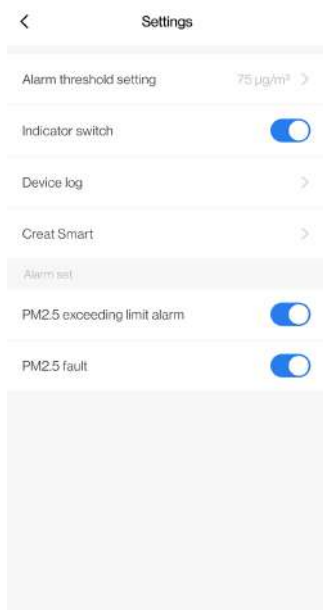

7

Ensure 'Offline Notification' is switched on to receive tamper and offline notifications. You can rename the device by clicking on the pen icon, this is useful if multiple vape detectors are installed in one building.

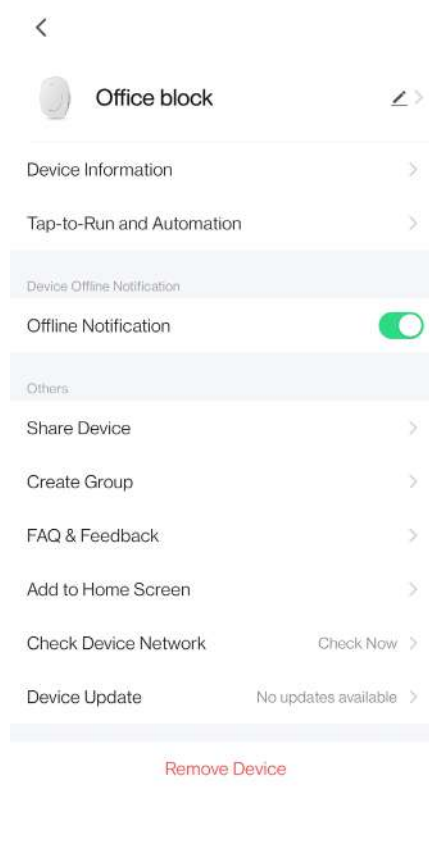

SCAN ME

To visit the online product page on our website for specs, datasheet, FAQs and place orders (via account).

Hispec Electrical Products Ltd

Unit 21, Drumhead Road
Chorley North Business Park
Chorley, Lancashire, PR6 7BX

www.hispec.co.uk

customerservices@hispec.co.uk | 01257 262197