



Quick Installation Guide

X1 Series 0.6KW-3.6KW

II


Inverter Installation




- Unscrew the bracket from the back of the inverter.
- Mark the position of the two holes.




- Drill holes with $\phi 6$ drill.
- Depth: at least 50mm.

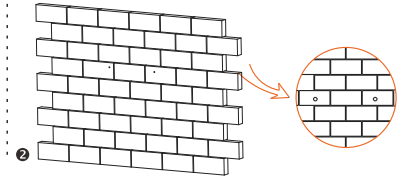


- Tighten the expansion tubes.

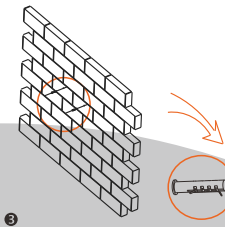

- Screw the expansion screws.

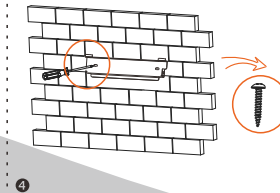


- Match the inverter with the bracket.
- Screw the cross recessed screw on the right side.

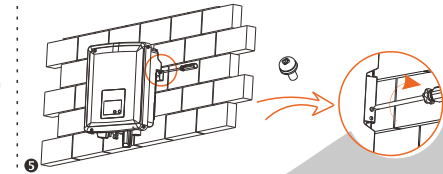


I


Packing Lists

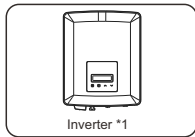


Inverter *1

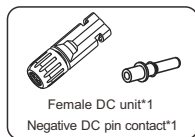

Female DC unit*1
Negative DC pin contact*1

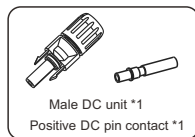


Male DC unit *1
Positive DC pin contact *1

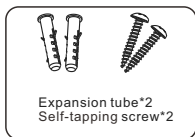


Expansion tube*2
Self-tapping screw*2




Earth terminal * 1

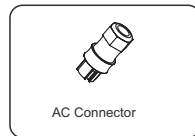


AC Connector

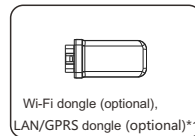

Wi-Fi dongle (optional),
LAN/GPRS dongle (optional)*1

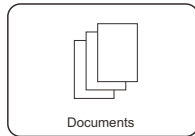

Documents

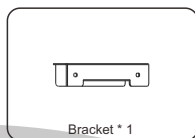

Bracket * 1

Note:


- 1) Please refer to the appropriate instruction manual for the usage of optional accessories.
- 2) For the optional accessories, please be subject to the actual delivery.

III


PV Connection




Cable size: 4~6 mm²
strip length:




-Align the two halves connectors.

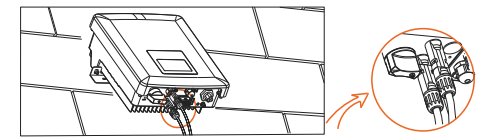


positive DC
pin contact



male plug



negative DC
pin contact



nut




female plug




clamp contact

tight nut

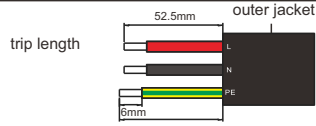


1. Slide the cable nut and back shell onto the cable.




2. Insert the stripped end of each three wires into holes in the female insert, then tighten each screw with L-type wrench.




3. Screw down the threaded sleeve of the pressure screw.



5. Connect the AC plug to the inverter, and screw down the pressure screw on the top part of AC terminal.

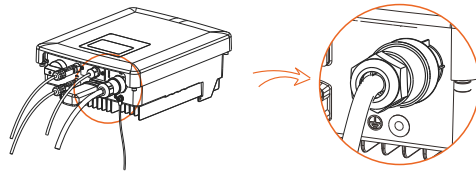


4. Screw down the pressure screw.




Model	X1-0.6/0.7/1.1/1.5	X1-2.0	X1-2.5/3K/3.3K	X1-3.6K
L,N cable(mm ²)	2.5-6	2.5-6	2.5-6	4-6
PE cable(mm ²)	2.5-6	2.5-6	2.5-6	2.5-6
Micro-breaker	10A	16A	20A	20A


- Download the upgrade program into USB flash drive.
- Insert the USB flash drive with program into the "DONGLE" port on the bottom.

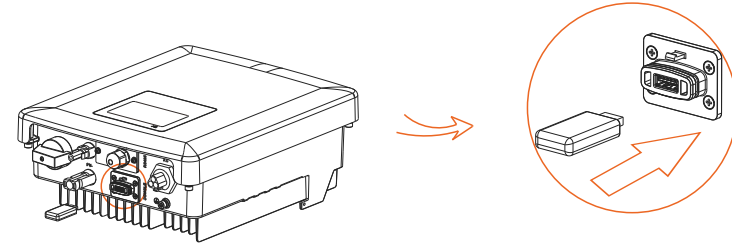



- Screw the ground screw with Φ4 hexagon wrench shown as follow.

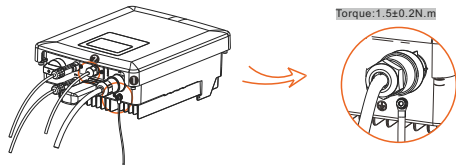


- Prepare the connector and the communication cable, following the PIN definition and assembly order below, then insert the cable into the corresponding RS485 port of the inverter, and tighten the waterproof connector.



PIN	1	2	3	4	5	6	7	8
Definition	CT+	Com/DRMO	GND_COM	Meter_A/485_A	Meter_B/485_B	E_Stop	RefGen	CT-

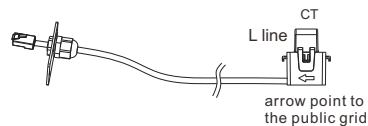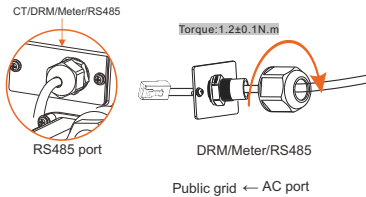

- Overview for connection.

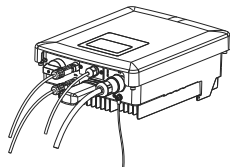

- After checking all connections are correct, turn on the external DC /AC breakers.


- Turn on the DC switch to the "ON" position.

- Inverter will start automatically when PV panels generate enough energy. The LED will be blue and the LCD screen will display the main interface.

➤ For the inverter with LCD, user can refer to the following:

- Please contact the service to get the latest firm -Please contact Solax service to get the latest firmware. Then add a new folder named "Update" in the root directory on your Udisk, and two more sub-folders named "ARM" and "DSP" under "Update". Please copy the firmware files into ARM and DSP respectively. It will be like:
 update\ARM\618.00207.00_X1_BOOST3.0_MINI2.0_AIR2.0_ARM_V1.21_20200826.usb;
 "update\DSP\618.00381.00_X1_BOOST3.0_MINI2.0_AIR2.0_DSP_V2.03_20201117.usb
 Press and hold the "Enter" key for 5 seconds to enter Off Mode. Then unscrew the waterproof lid and insert the U-disk into the "upgrade" port.

- When the user turns on all the switches, the LCD will show pictures as bellow. And at the same time, the user can choose the program you need by short pressing " " and "V" key , and then long press "V" to confirm and upgrade the inverter.

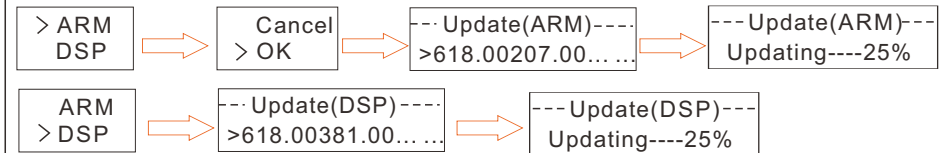

- After the upgrade is complete, please pull off the USB flash drive, and then screw the panel of DONGLE port.

* Please contact our service support to get the update package, and extract it into your USB flash drive. Please **DO NOT** modify the program file name! Otherwise it may cause the inverter not work anymore !